






Instrucciones de armado

Modelo: VELADOR 2 CAJ FLOR


SKU: 137183999

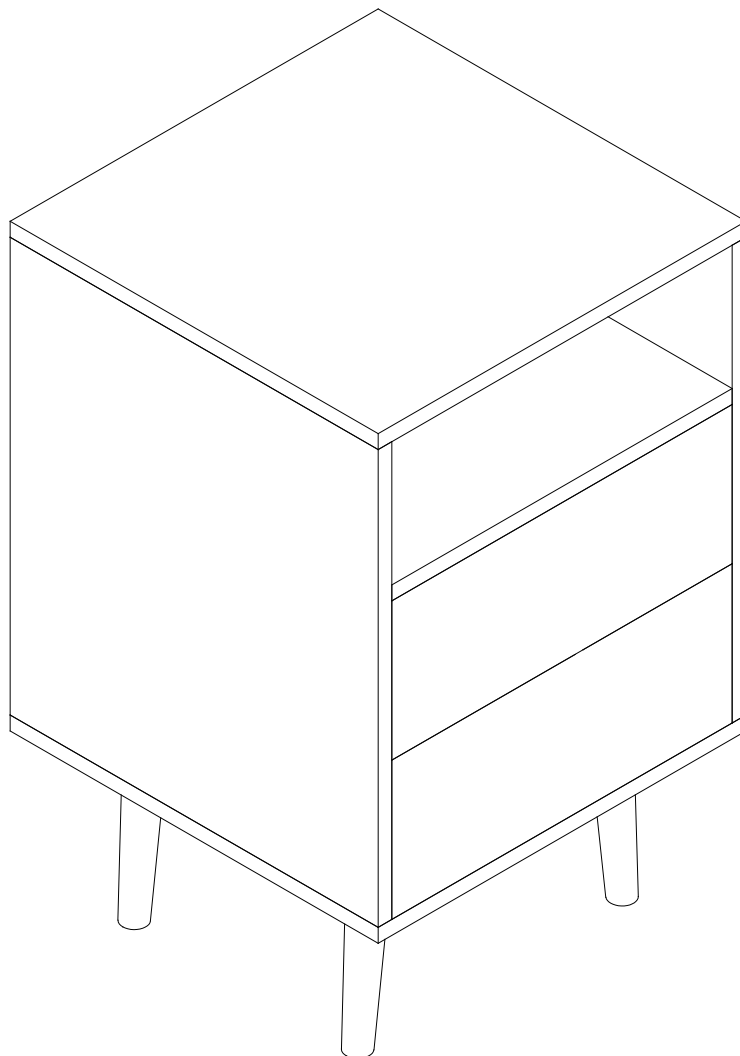

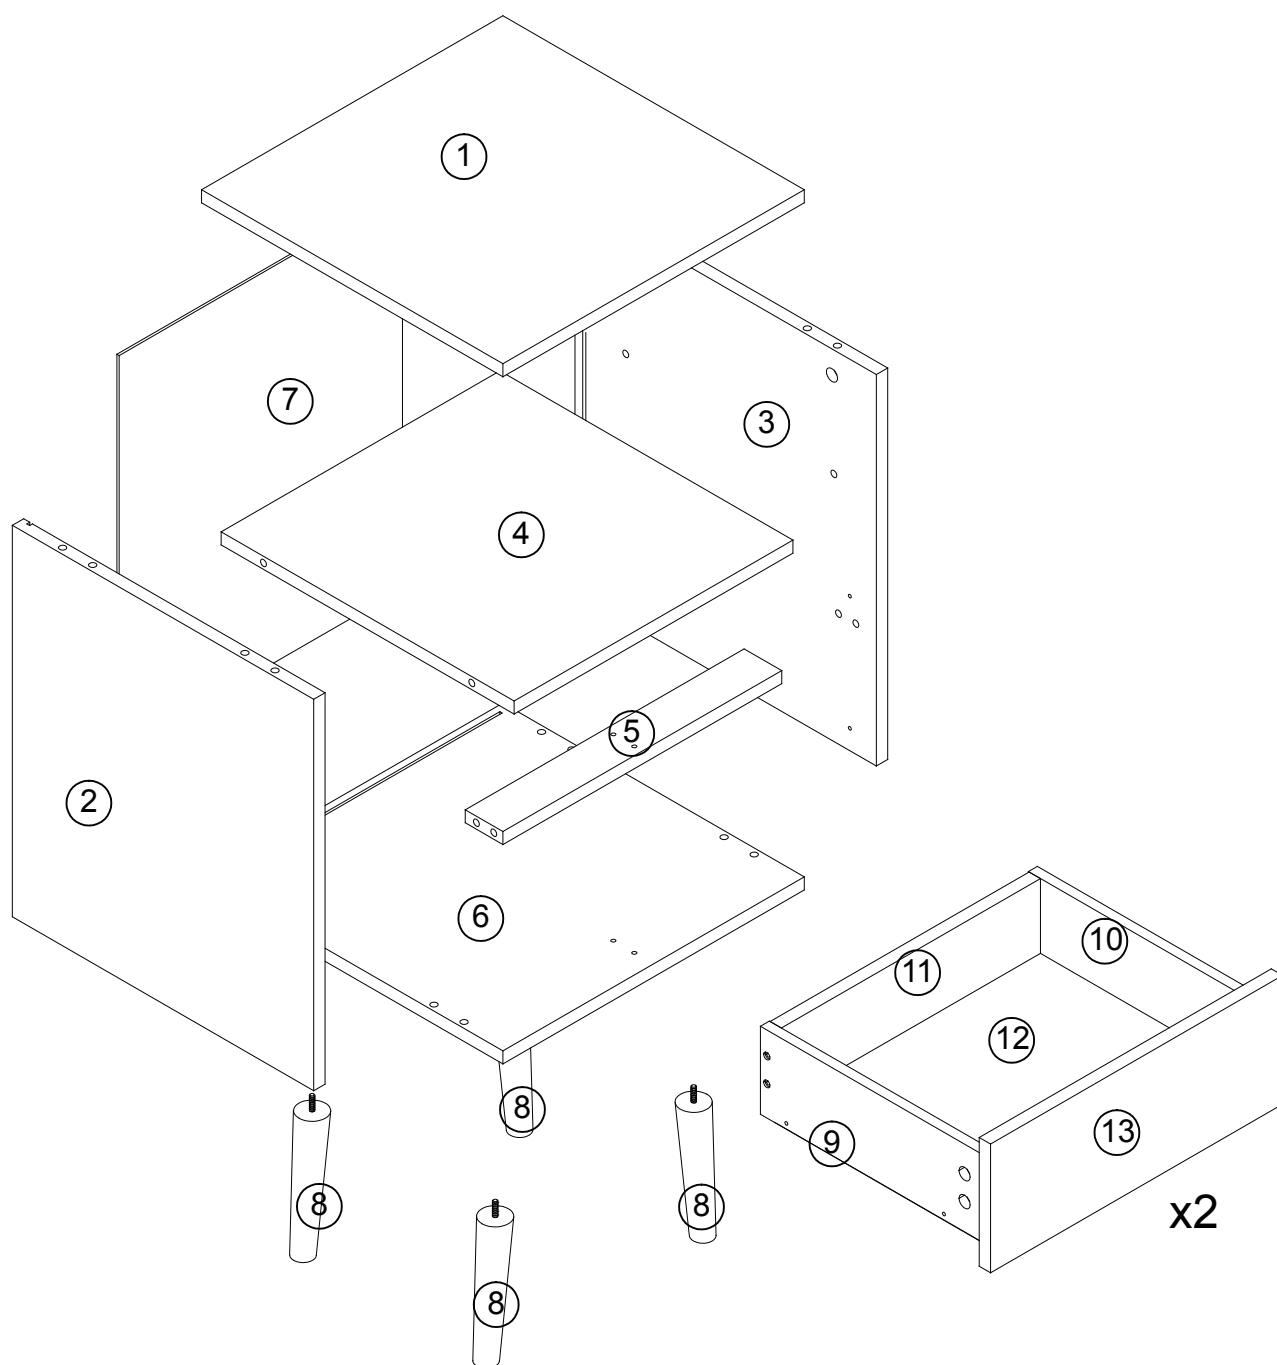


A x14  Cam Bolts	B x14  Hidden cams	C x14  Wood dowels	D x2  push bottom	E x2  washers	F x5  screw 4x35mm	G x8  screw 4x30mm
H x22  screw 3x12mm	I x2  slider runner	J x2  slider runner	K x2  slider runner	L x2  slider runner	M x4  metal scraps	N x21  screw
O x1  Anti-tip restraints	Q x2  washers	R x1  Expansion screws	S x4  screw 3x14mm	V x4  backboard locker	Y x4  EVA pads	


1

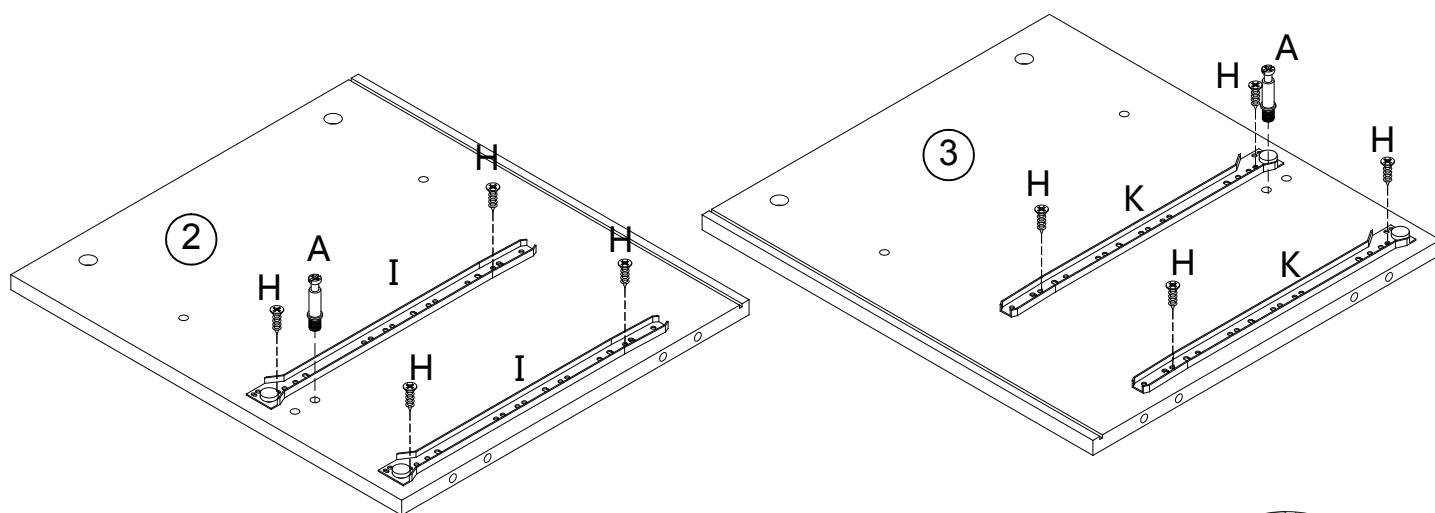


Use 4pcs H to connect 2pcs I with panel 2. Screwed A on the hole of panel 2.
Use 4pcs H to connect 2pcs K with panel 3. Screwed A on the hole of panel 3.

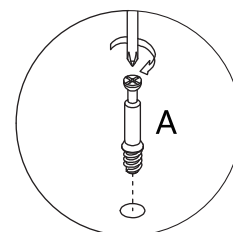


2

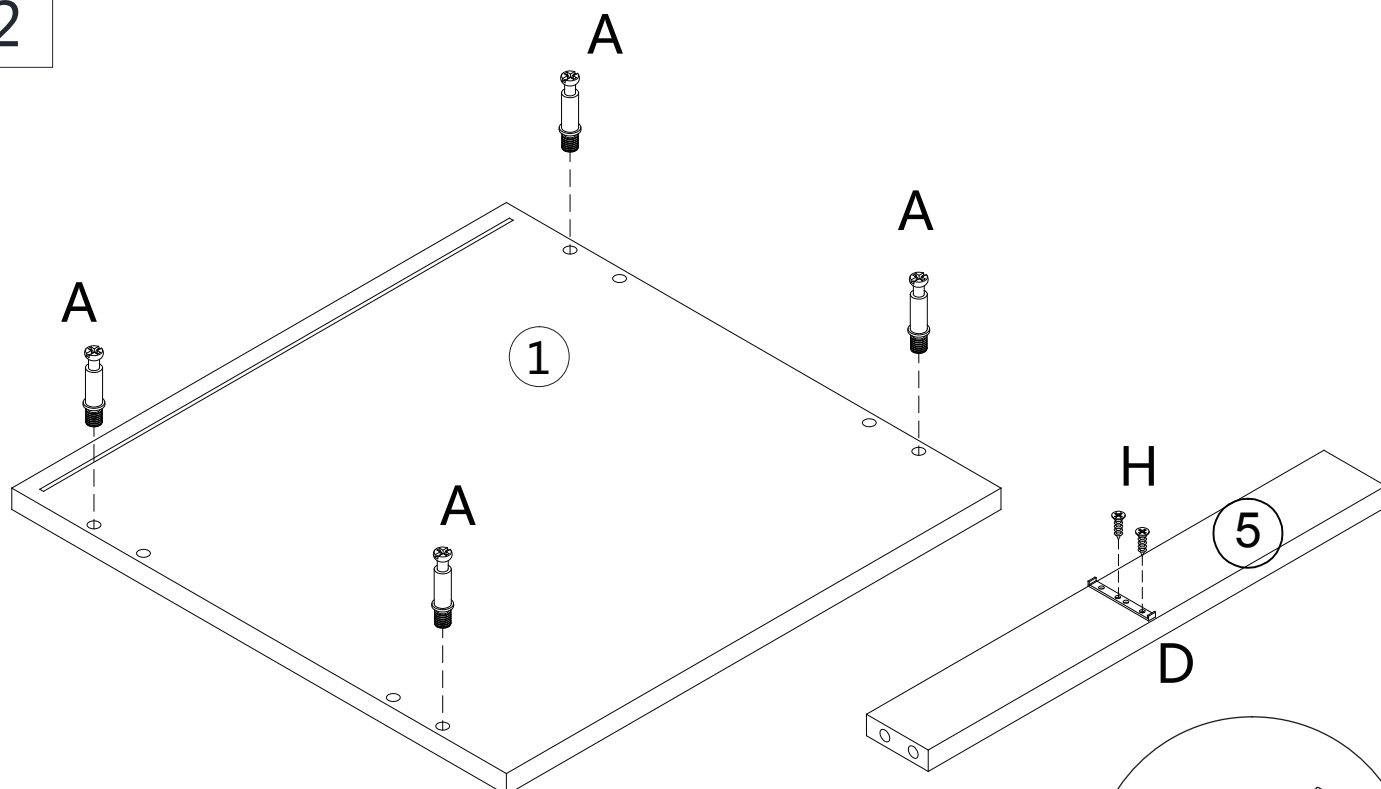


Screwed 4pcs A on the hole of panel 1. Use 2pcs H to connect D with panel 5.

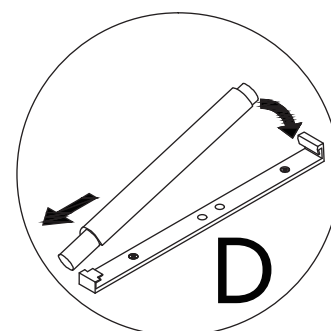


3

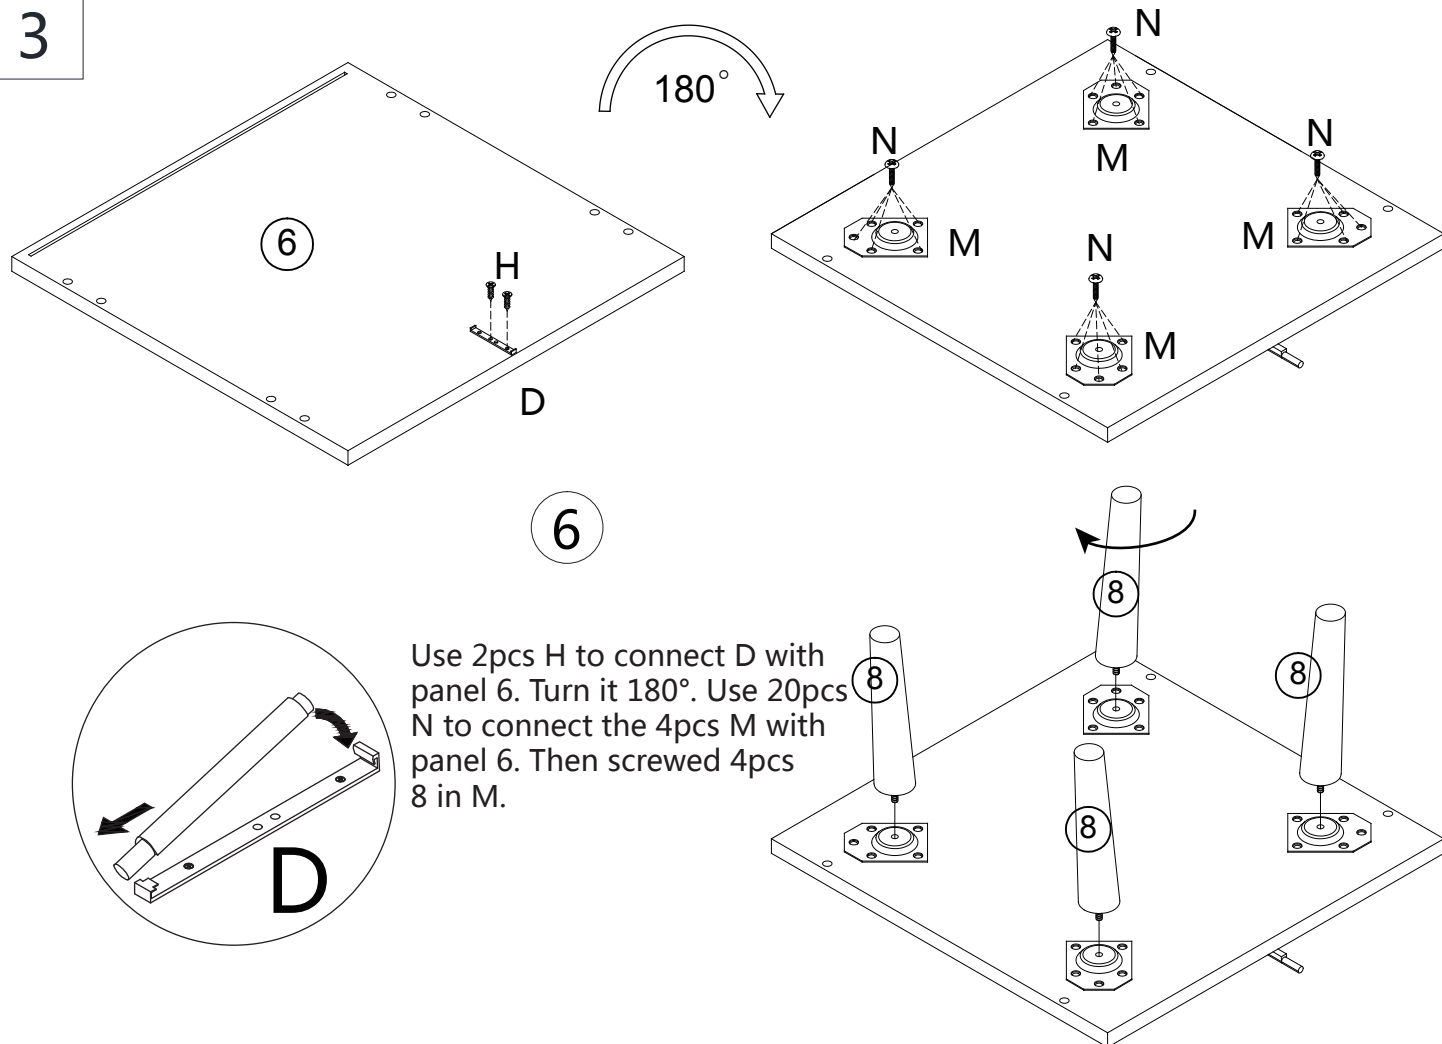


4

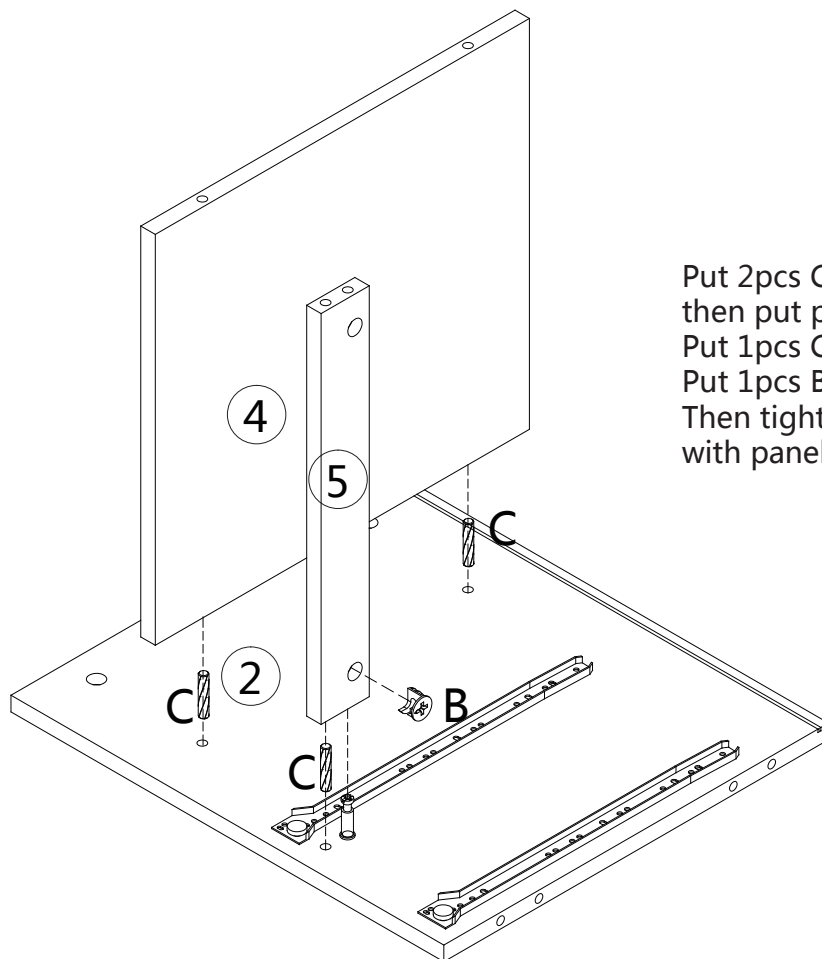

Put 2pcs C on the hole of panel 2, then put panel 4 on it.
Put 1pcs C on the hole of panel 2.
Put 1pcs B on the hole of panel 5.
Then tighten B to connect the panel 5 with panel 2.

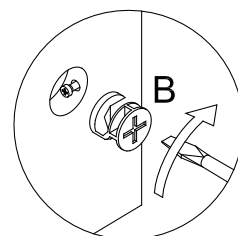


5

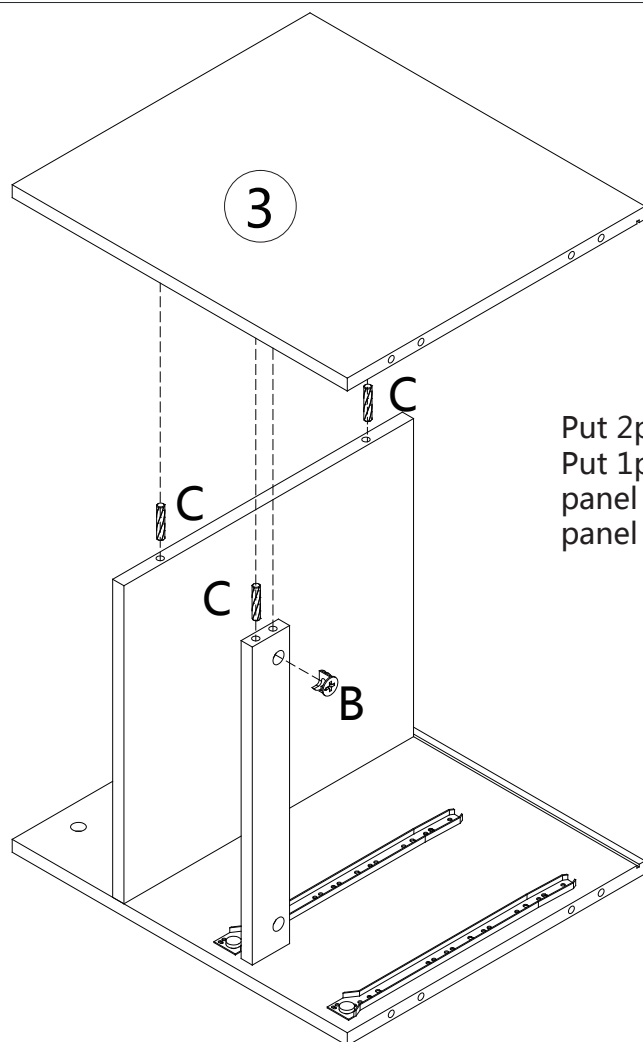

Put 2pcs C on the hole of panel 4.
Put 1pcs C and 1pcs B on the hole of
panel 5. Tighten B to connect the
panel 3 with panel 4 and panel 5.


6

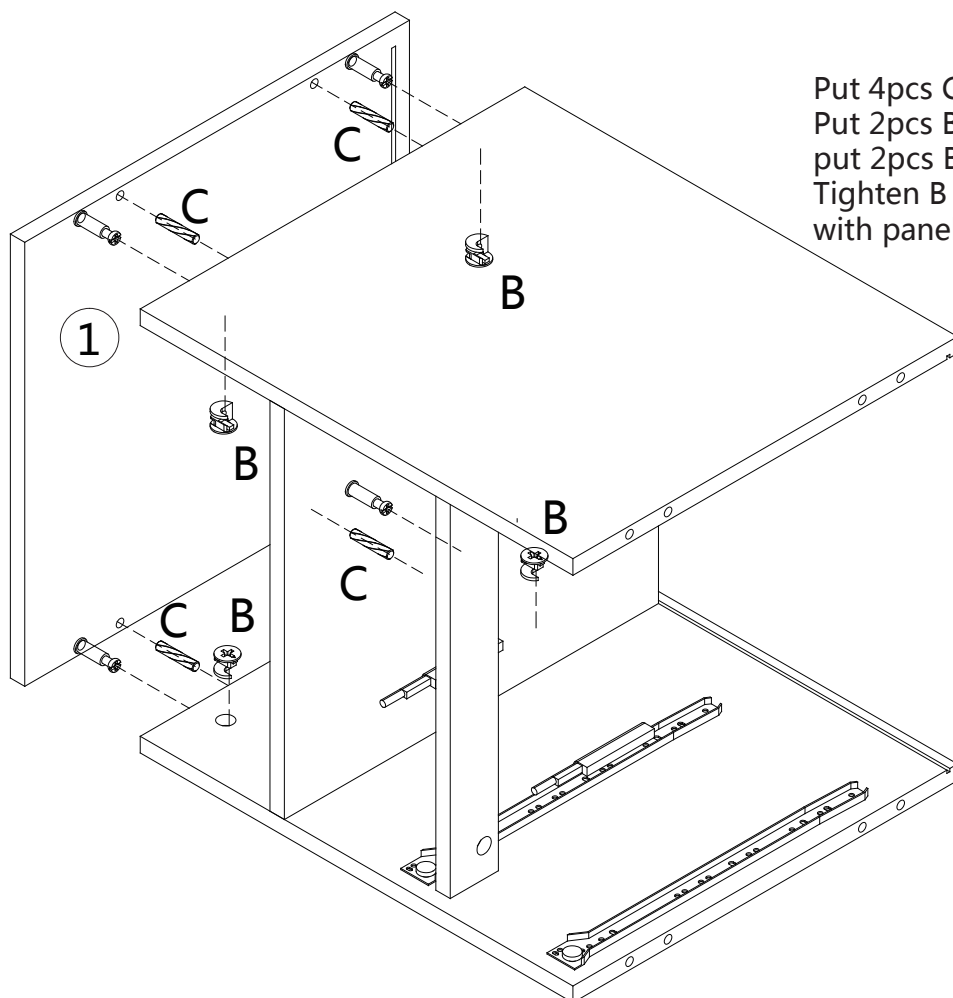

Put 4pcs C on the hole of panel 1.
Put 2pcs B on the hole of panel 2,
put 2pcs B on the hole of panel 3.
Tighten B to connect the panel 1
with panel 2 and panel 3.


7

Push the backboard 7 in the product.

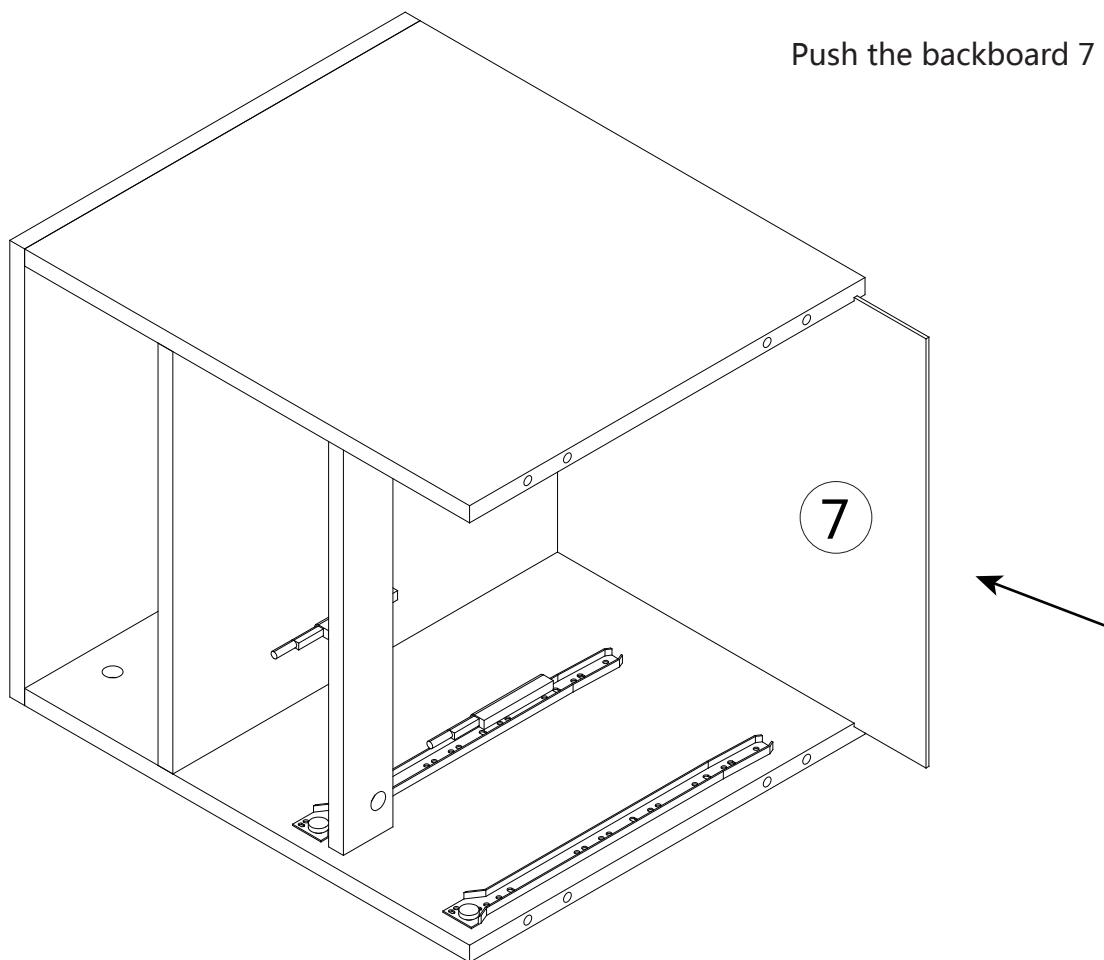


8

Put 4pcs C on the hole of panel 2 and panel 3.
Use 4pcs F to connect panel 6 with the product.
Put 4pcs Y on the bottom of legs.

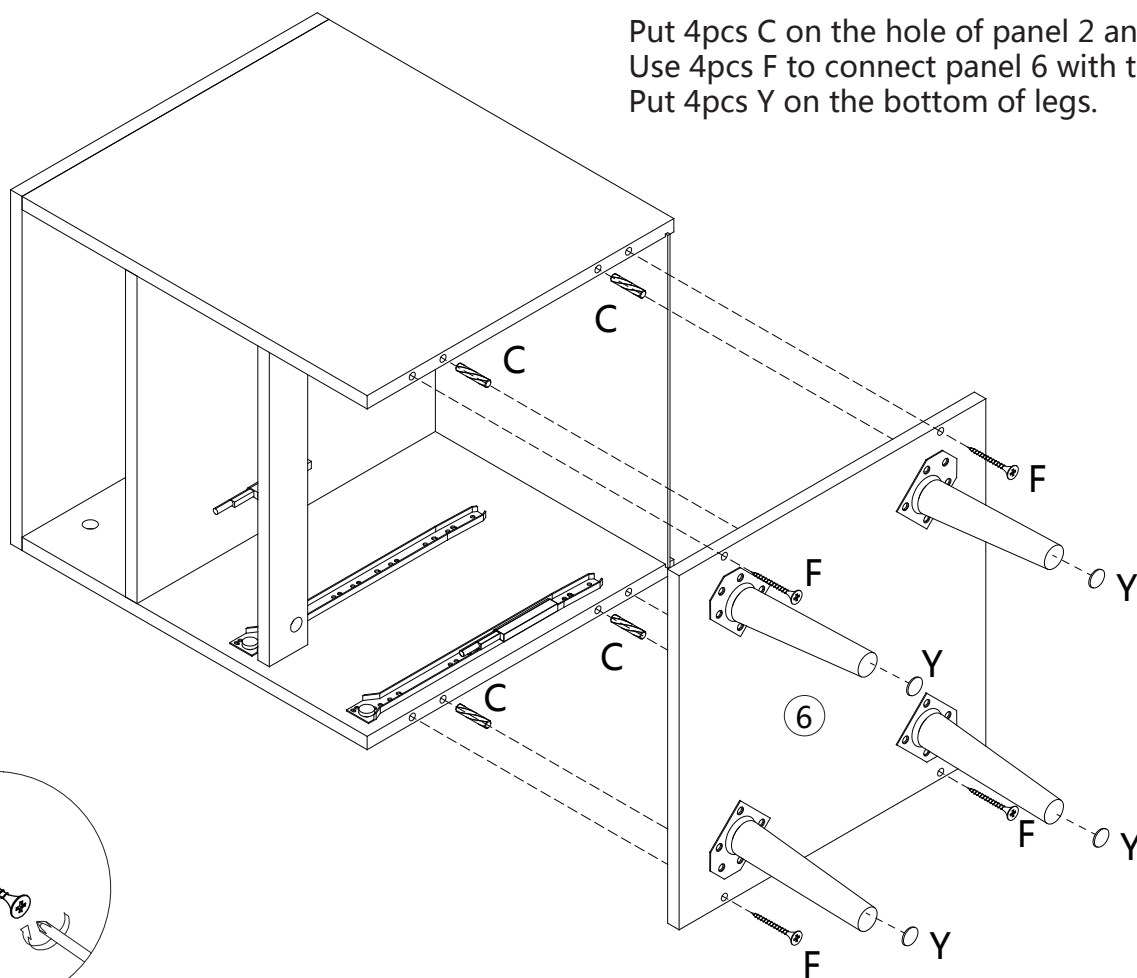

9


x2

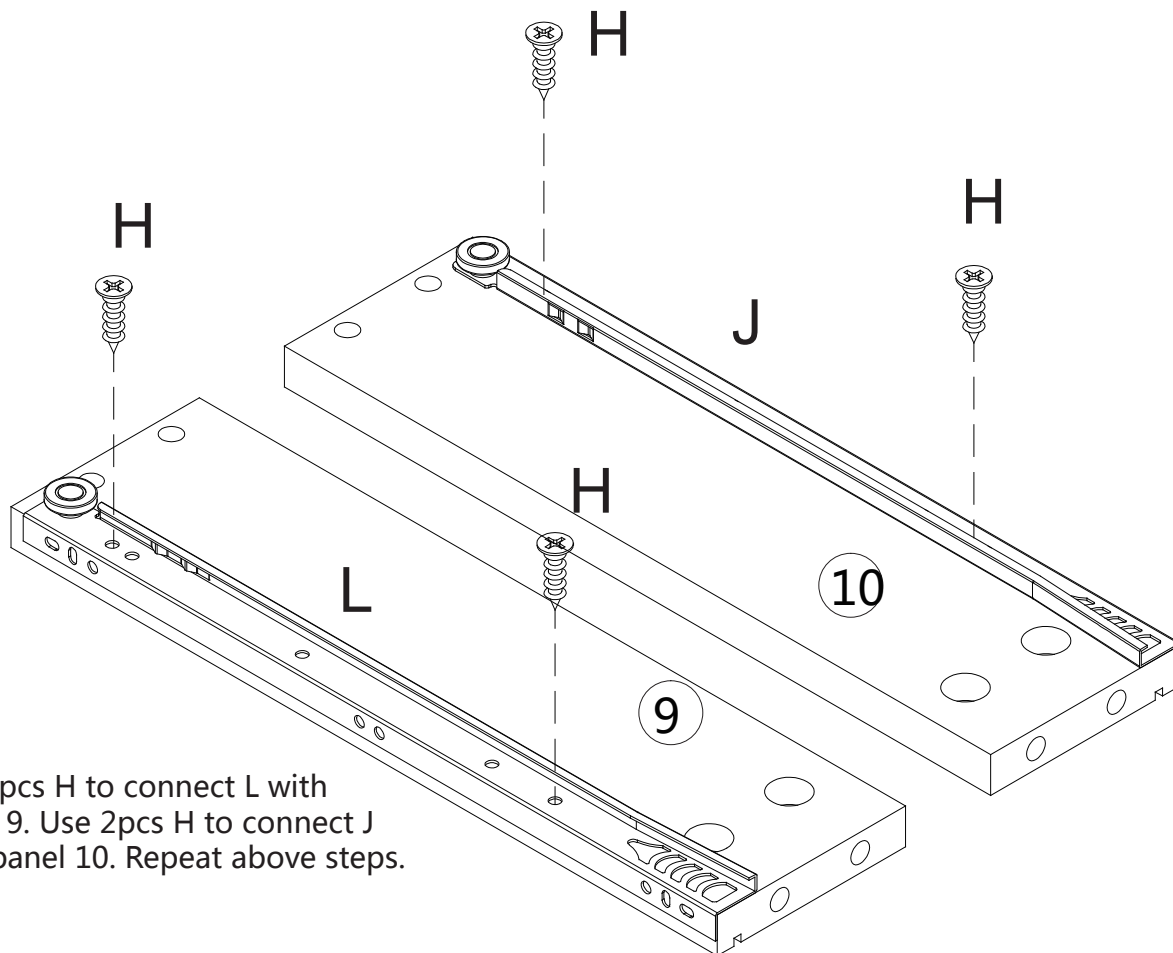

Use 2pcs H to connect L with panel 9. Use 2pcs H to connect J with panel 10. Repeat above steps.

10


x2

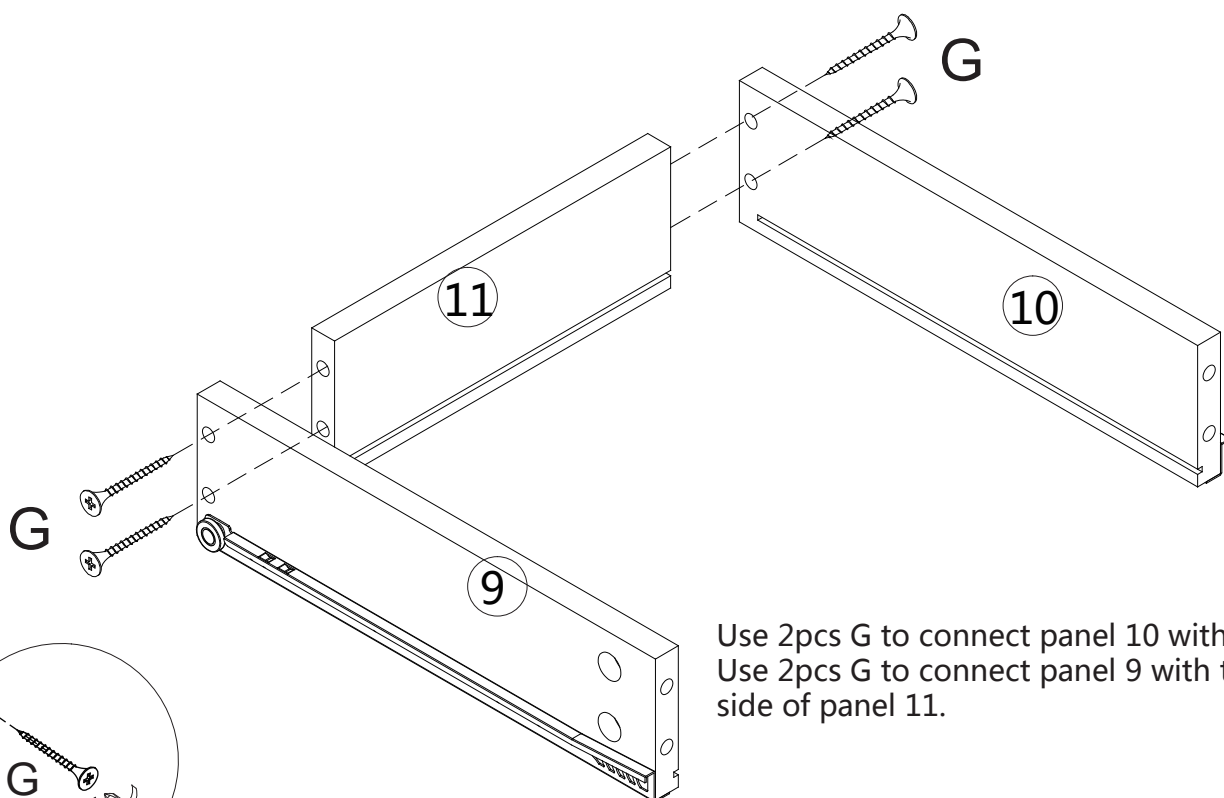

Use 2pcs G to connect panel 10 with panel 11.
Use 2pcs G to connect panel 9 with the other side of panel 11.


11

x2


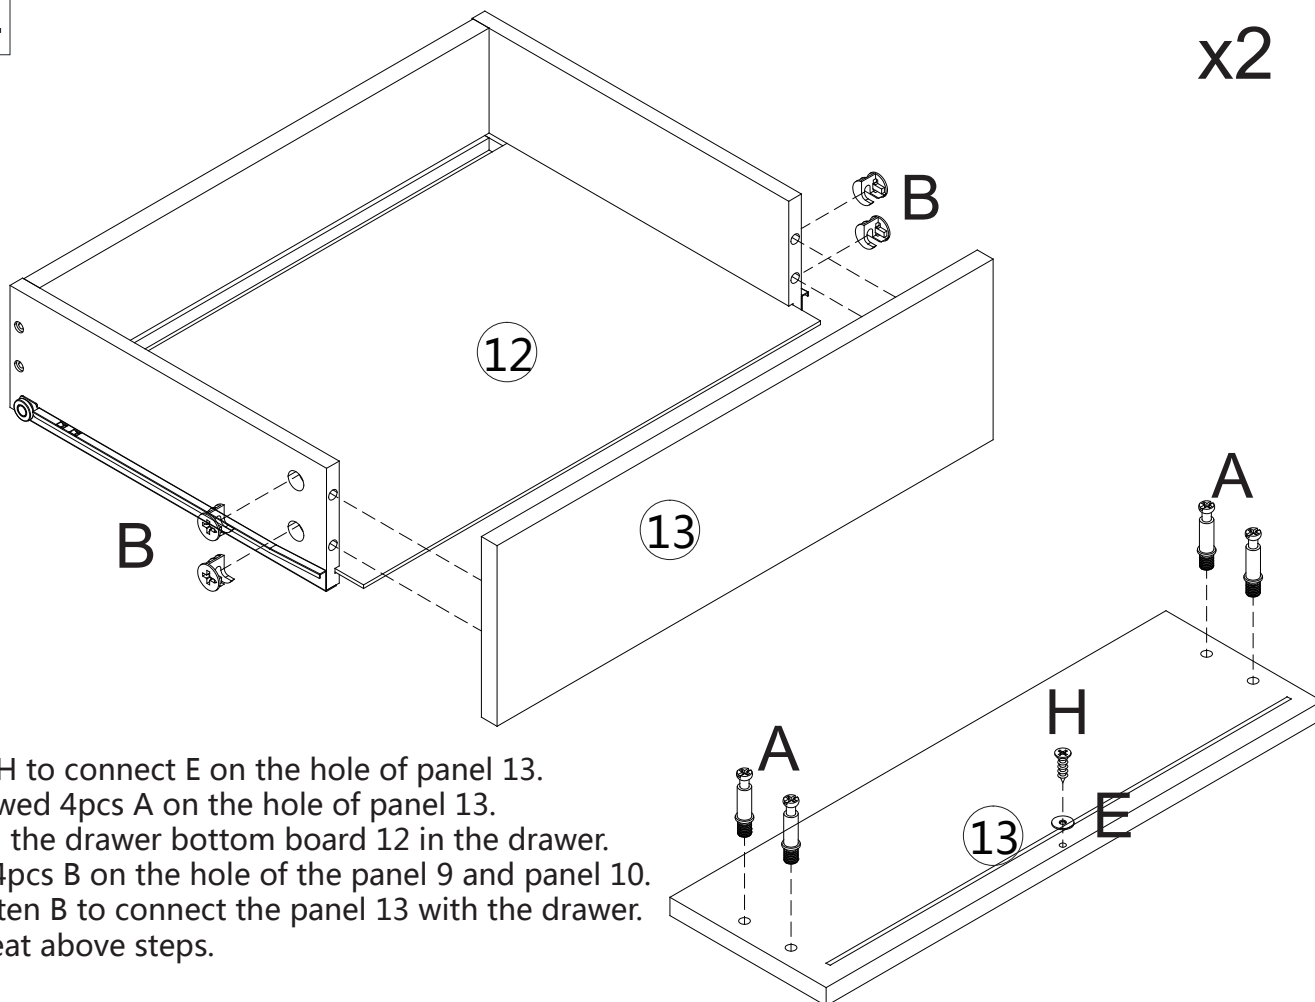


12


Put the drawers in the product.

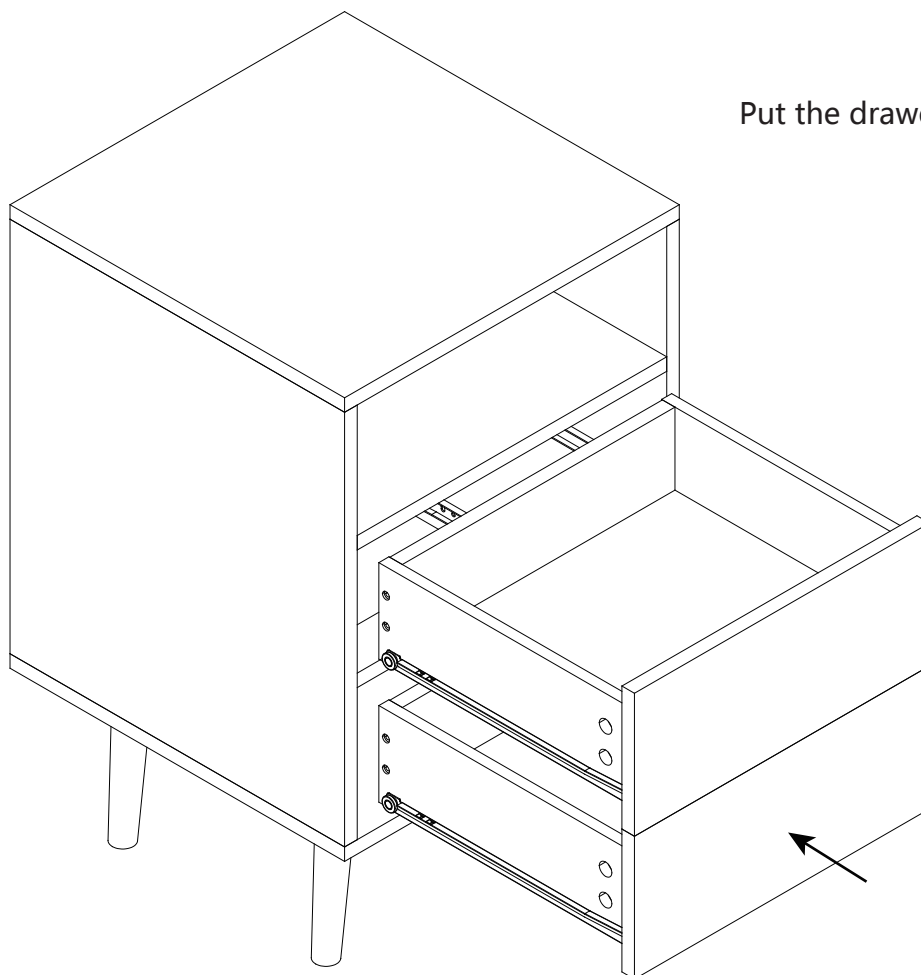


13

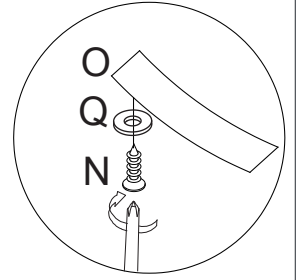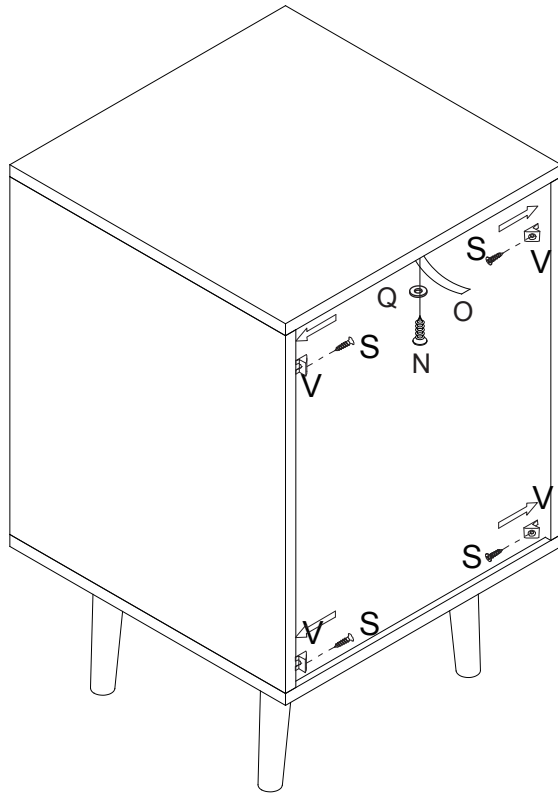

Use screw N to connect Q and O with the product.
Use 4pcs screw S to connect 4pcs V with the backboard of product.

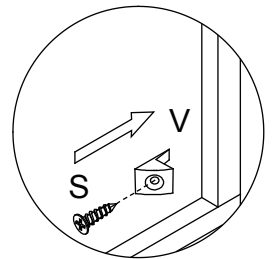

14

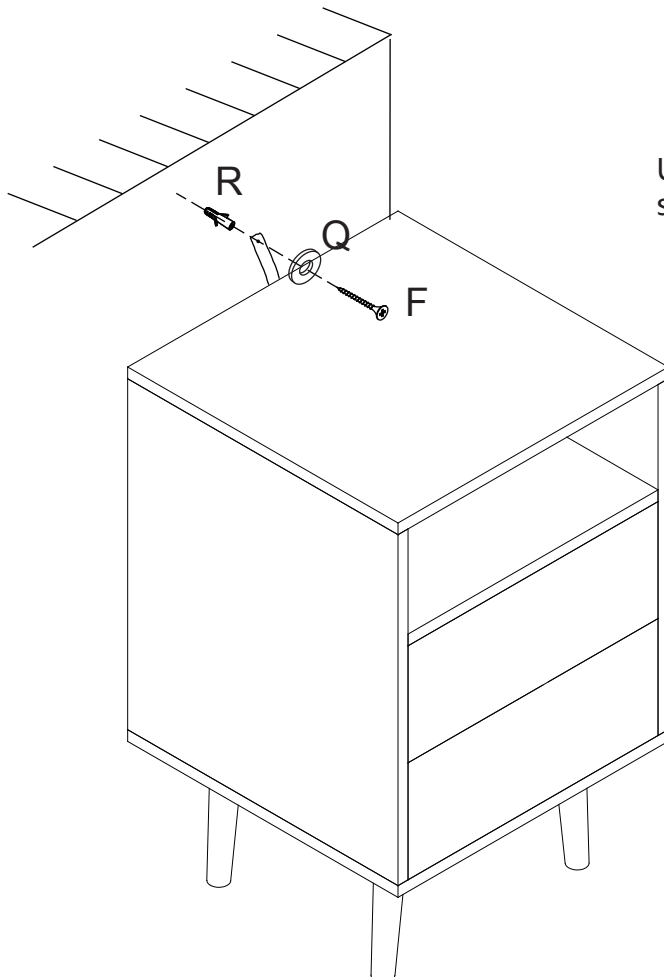

Use screw F to connect Q, R and the other side of O with the wall.