

Instrucciones de armado

Modelo: COMODA 3 CAJ FLOR

SKU: 137213999

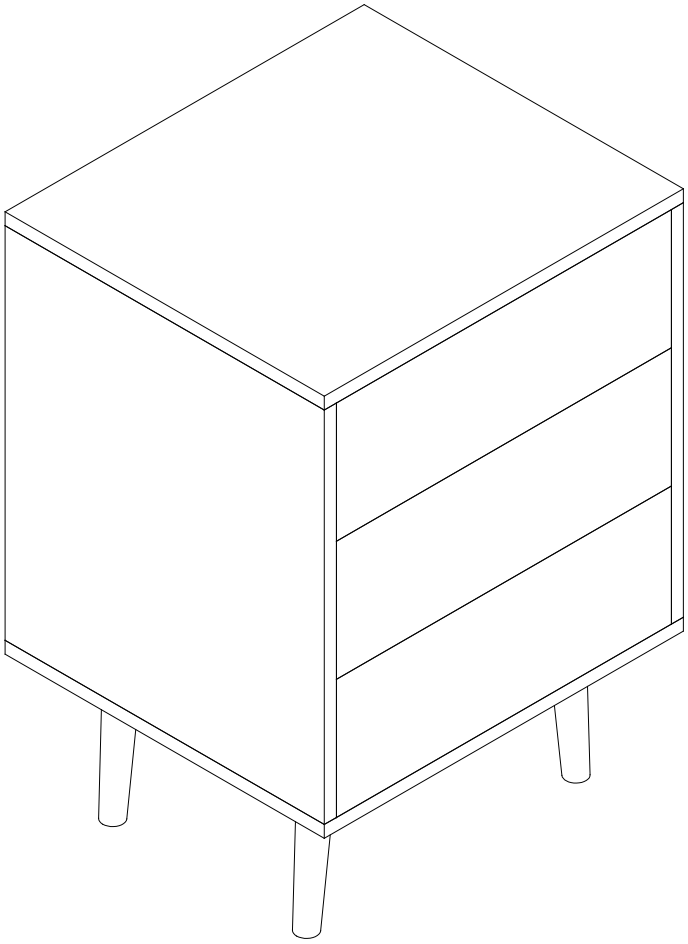

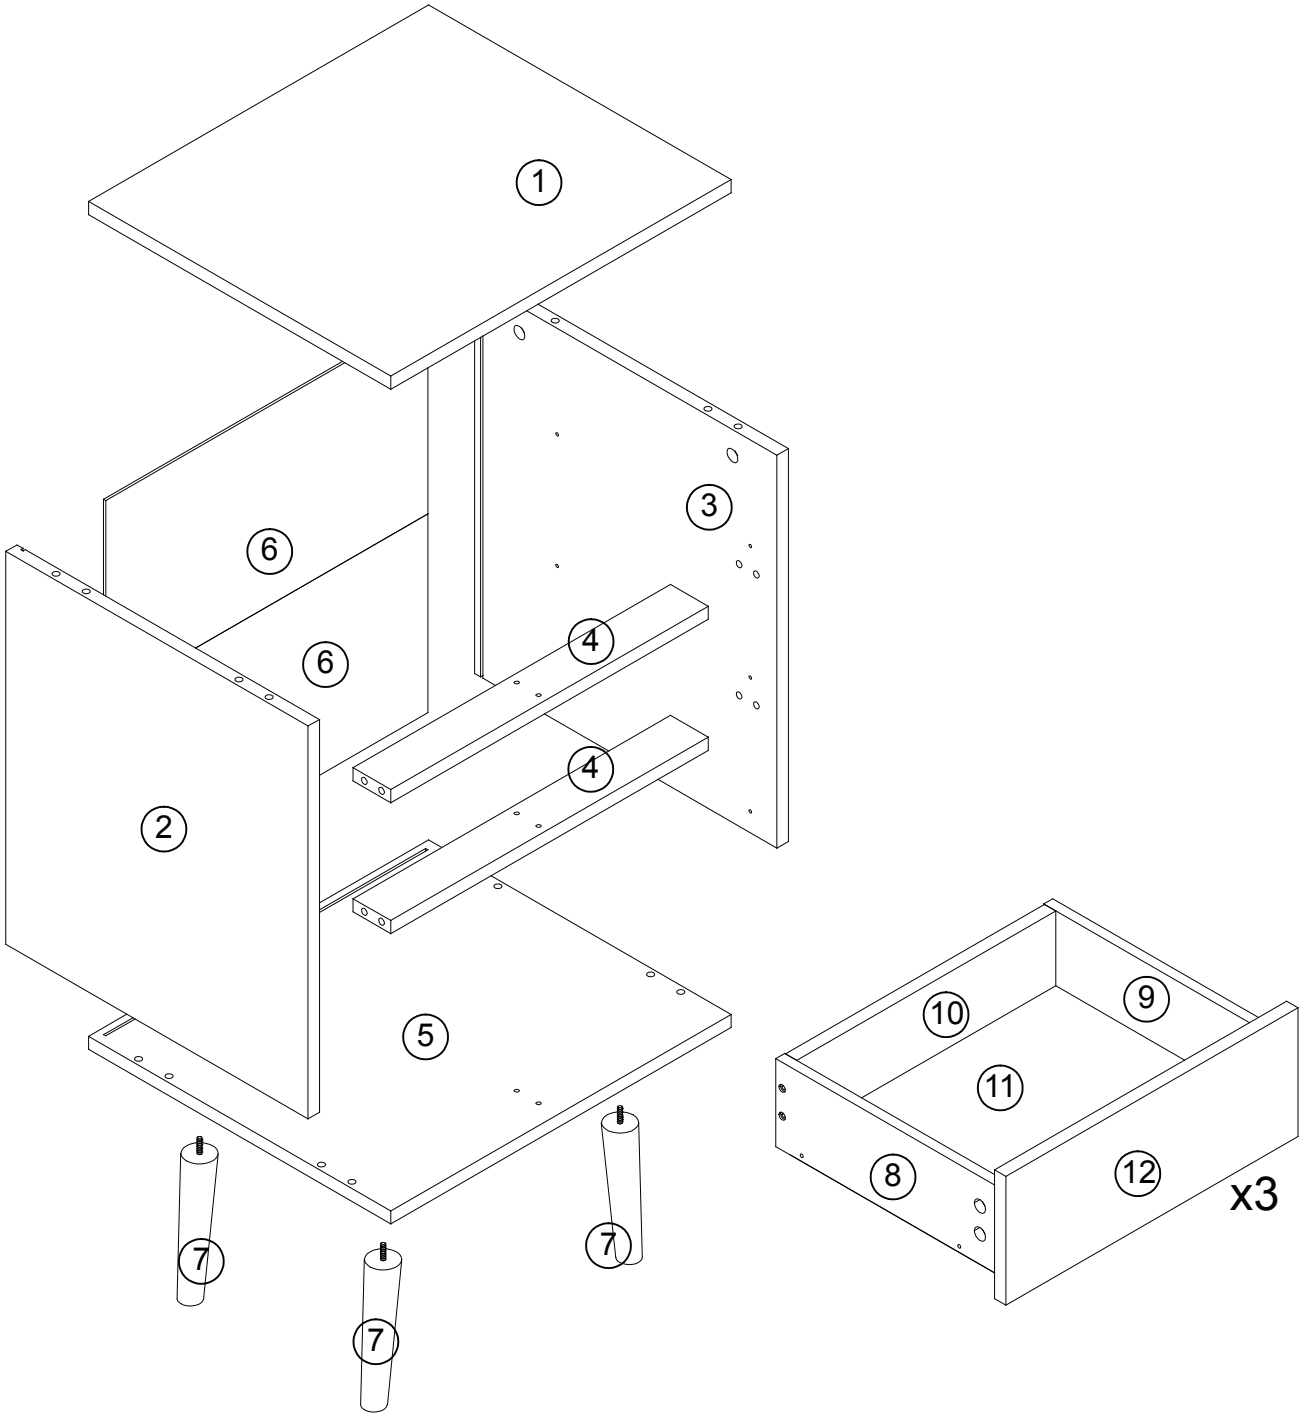


A x20	B x20	C x12	D x3	E x3	F x5	G x12
Cam Bolts	Hidden cams	wood dowels	push botton	washers	screw 4x35mm	screw 4x30mm

H x33	I x3	J x3	K x3	L x3	M x4	N x21
screw 3x12mm	slider runner	slider runner	slider runner	slider runner	matal scraps	screw


O x1	Z x1	Q x2	R x1	S x4	V x4	Y x4
Anti-tip Restraints	back panel supporter	washers	Expansion screw	screw 3x14mm	Backboard locker	EVA Pads

1

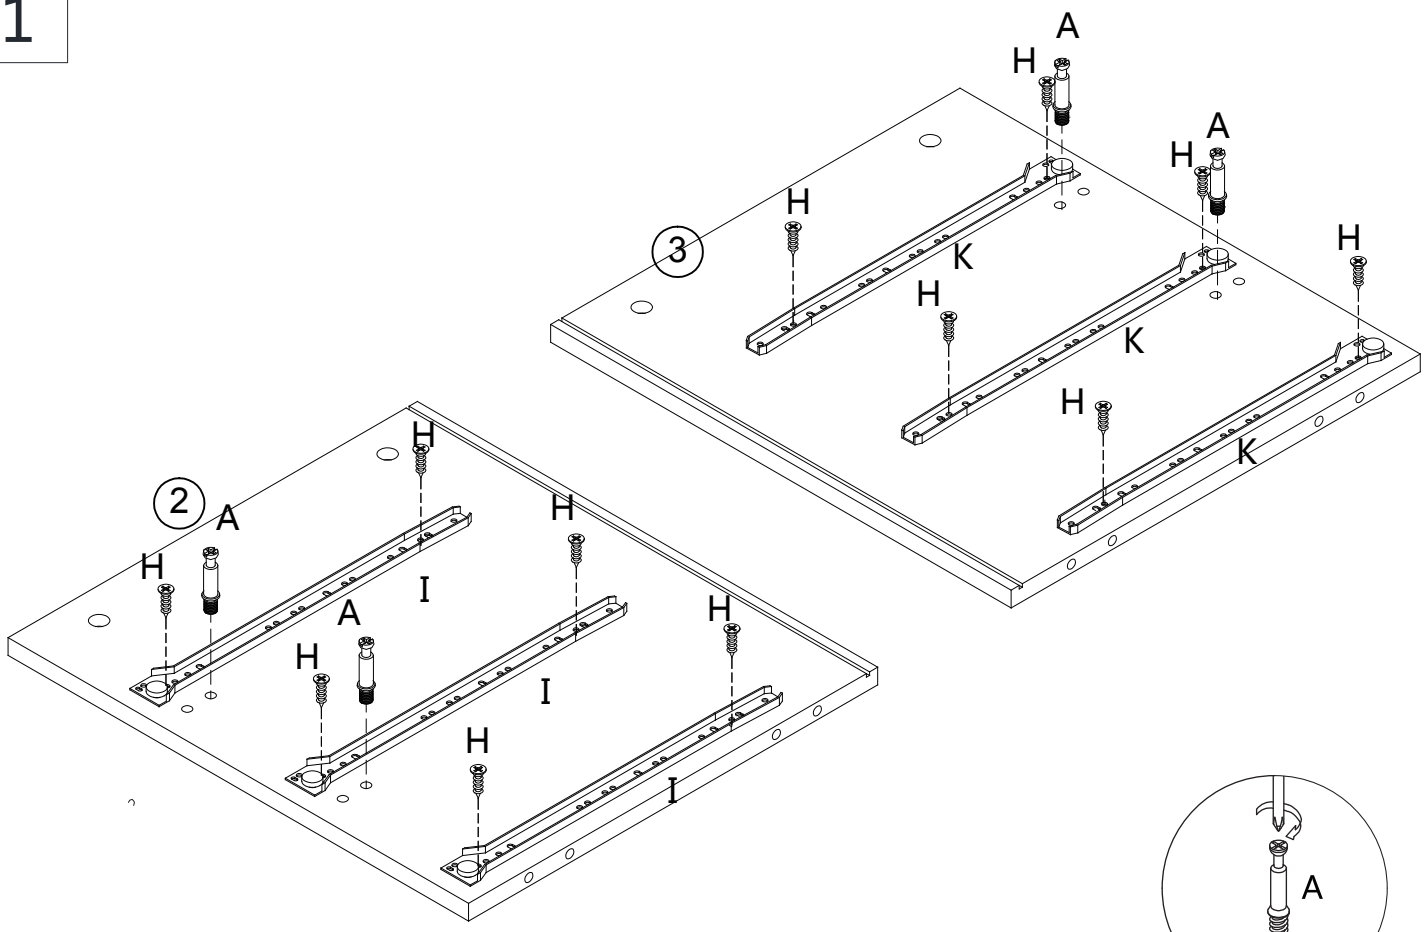


Screwed 2pcs A on the hole of panel 2. Use 6pcs H to connect 3pcs I with panel 2.
Screwed 2pcs A on the hole of panel 3. Use 6pcs H to connect 3pcs H with panel 3.

2

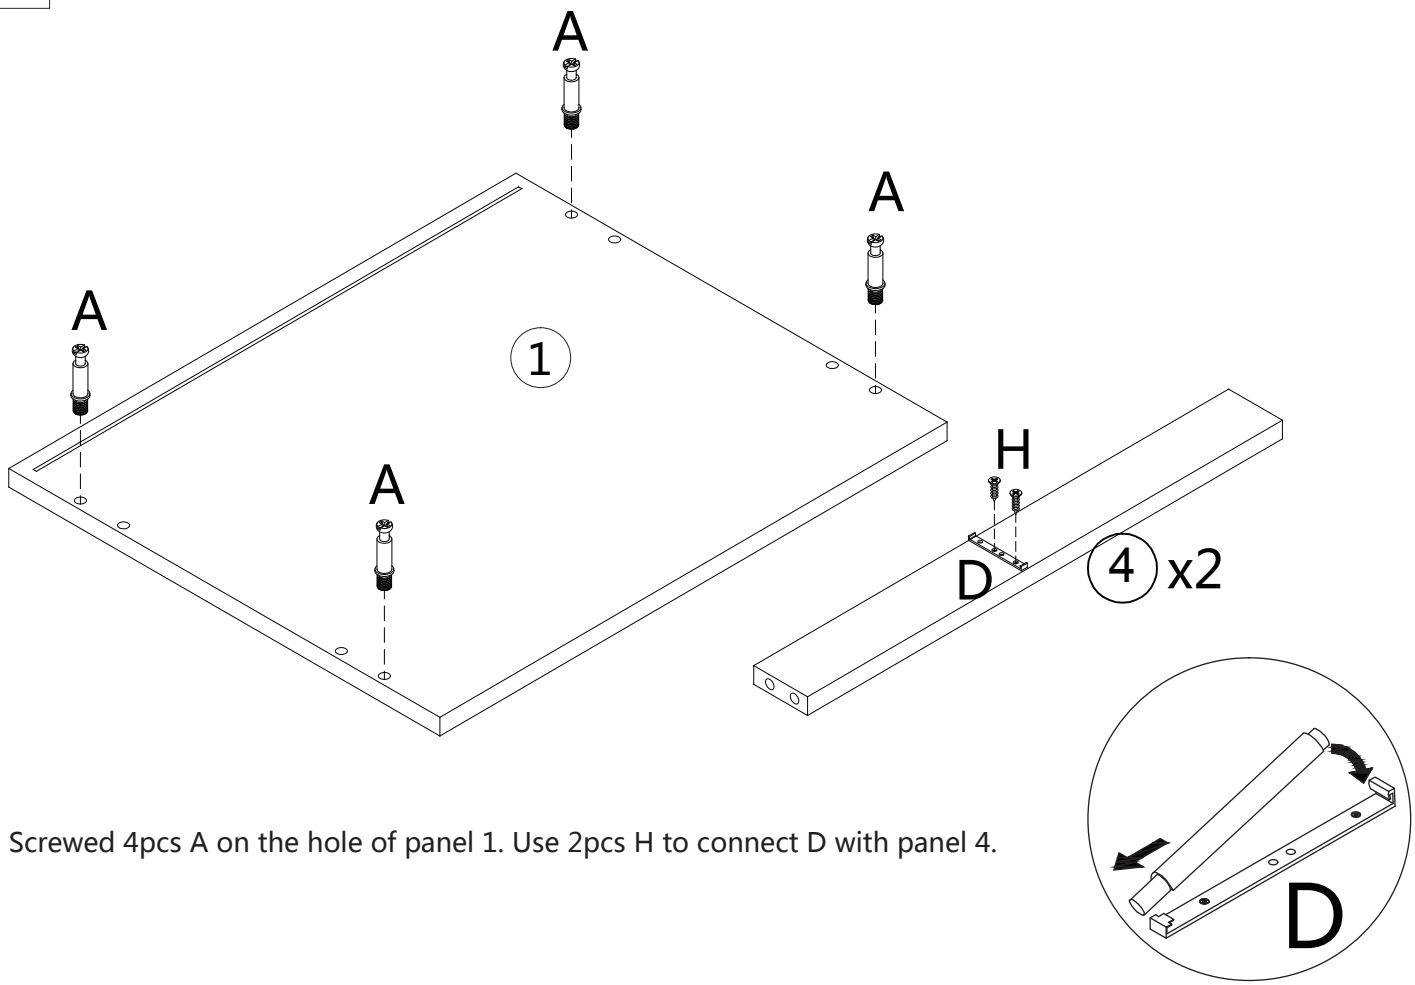



Screwed 4pcs A on the hole of panel 1. Use 2pcs H to connect D with panel 4.

3

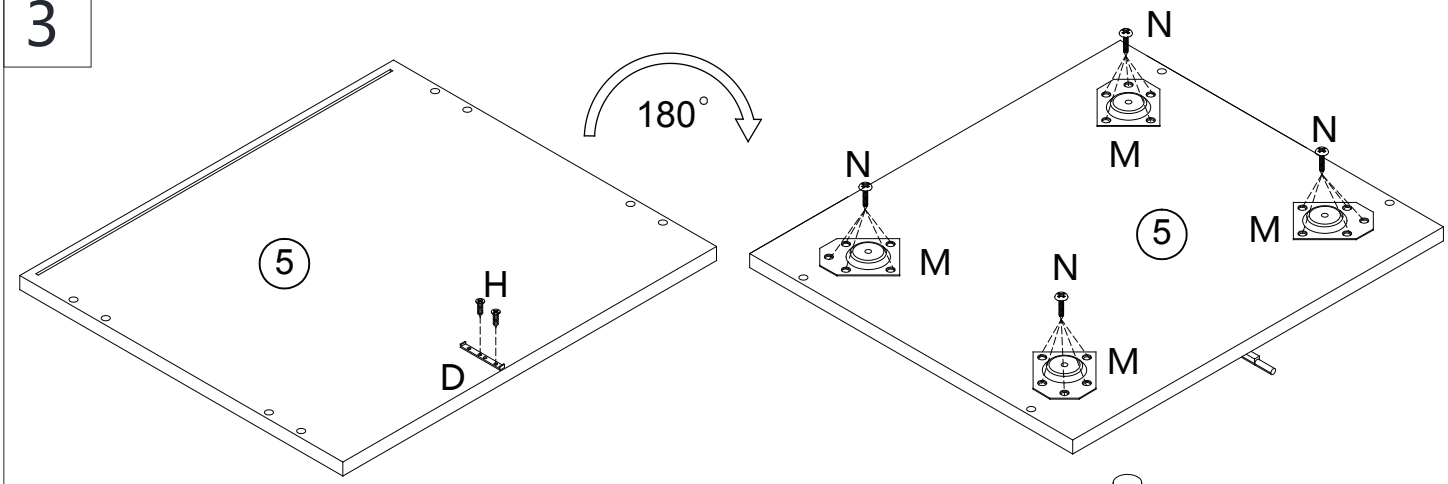


Use 2pcs to connect D with panel 5. Turn it 180°. Use 20pcs N to connect 4pcs M with panel 5. Screwed 4pcs legs 7 in M.

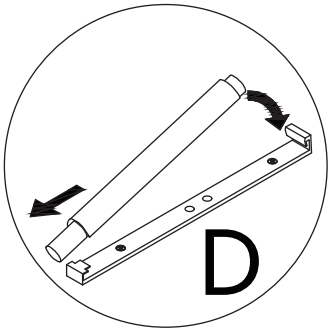


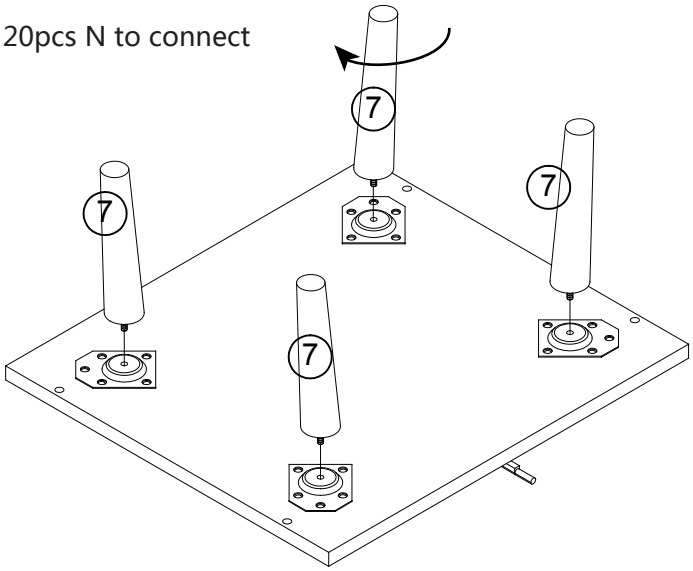


4

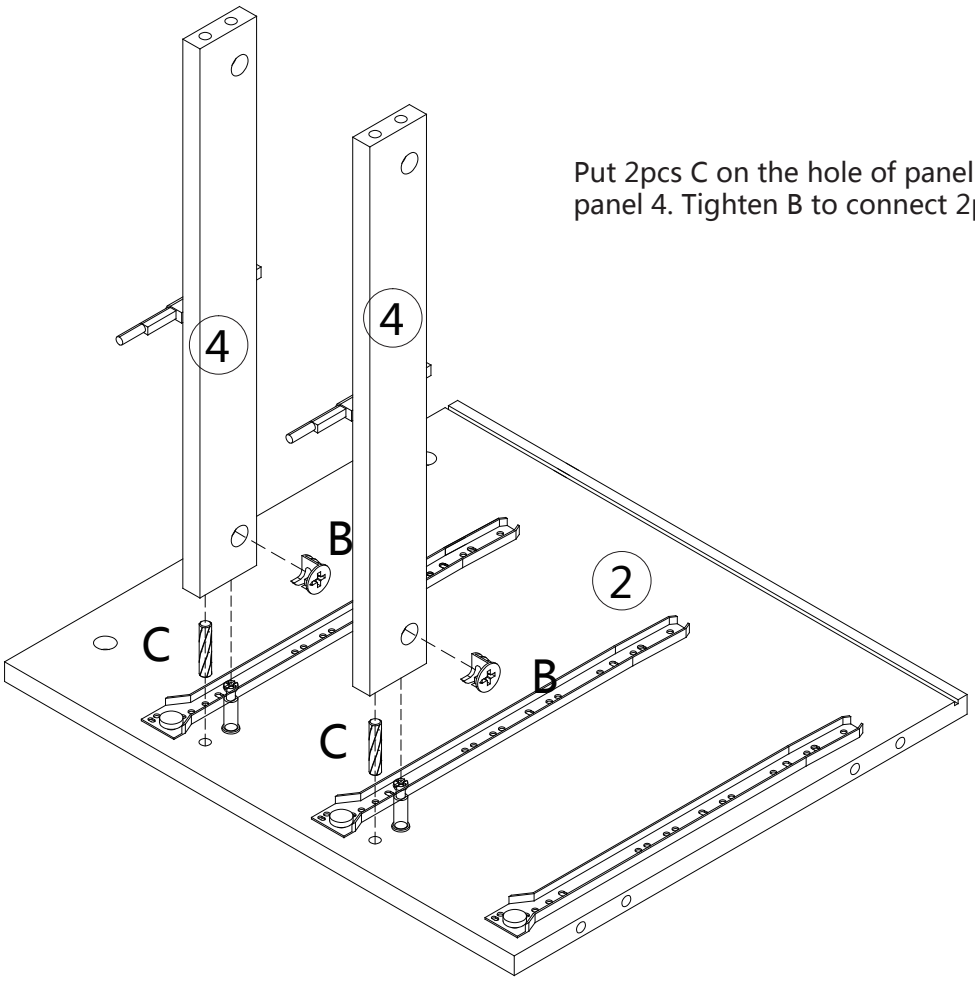

Put 2pcs C on the hole of panel 2. Put 2pcs B on the hole of panel 4. Tighten B to connect 2pcs panel 4 with panel 2.

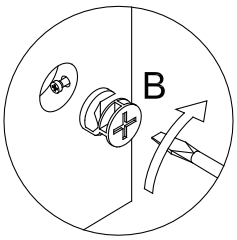


5

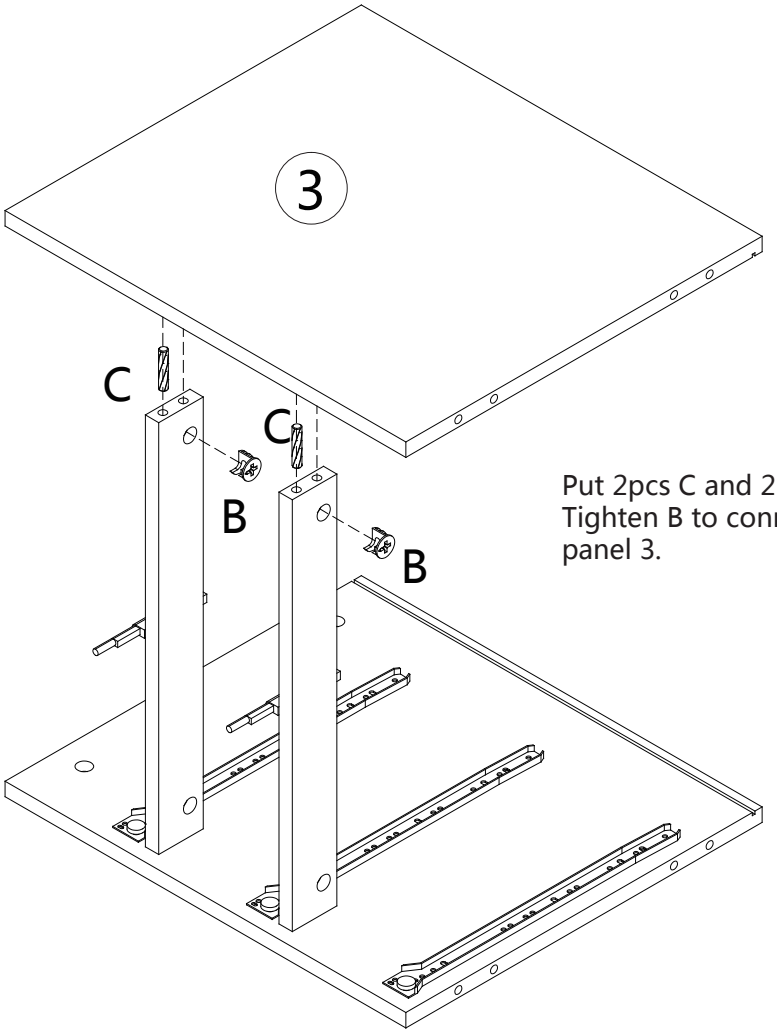


Put 2pcs C and 2pcs B on the hole panel 4. Tighten B to connect the 2pcs panel 4 with panel 3.

6

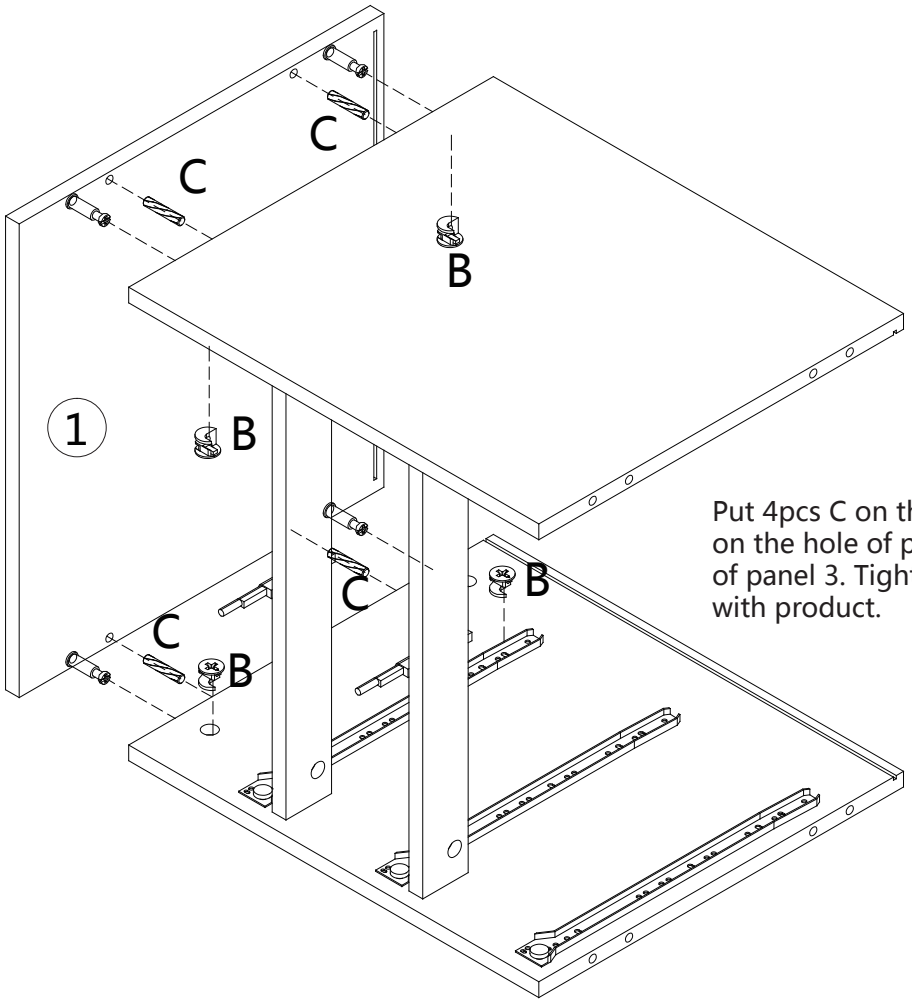

Put 4pcs C on the hole of panel 1. Put 2pcs B on the hole of panel 2, put 2pcs B on the hole of panel 3. Tighten B to connect the panel 1 with product.


7

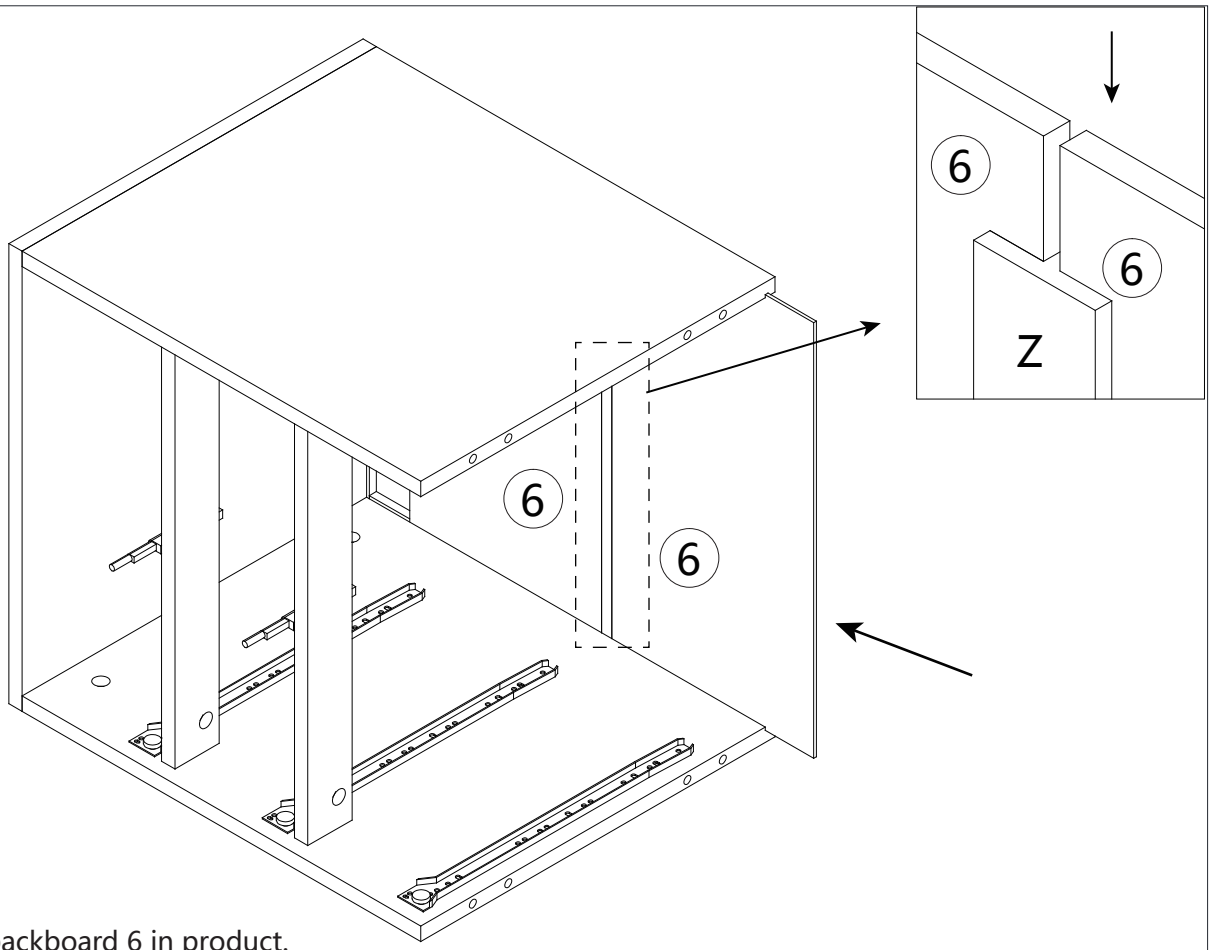

Push 2pcs backboard 6 in product.
Push Z in the 2pcs panel 6.


8

Put 4pcs C on the hole of product. Use 4pcs F to connect the panel 5 with the product. Put 4pcsY on the bottom of legs.

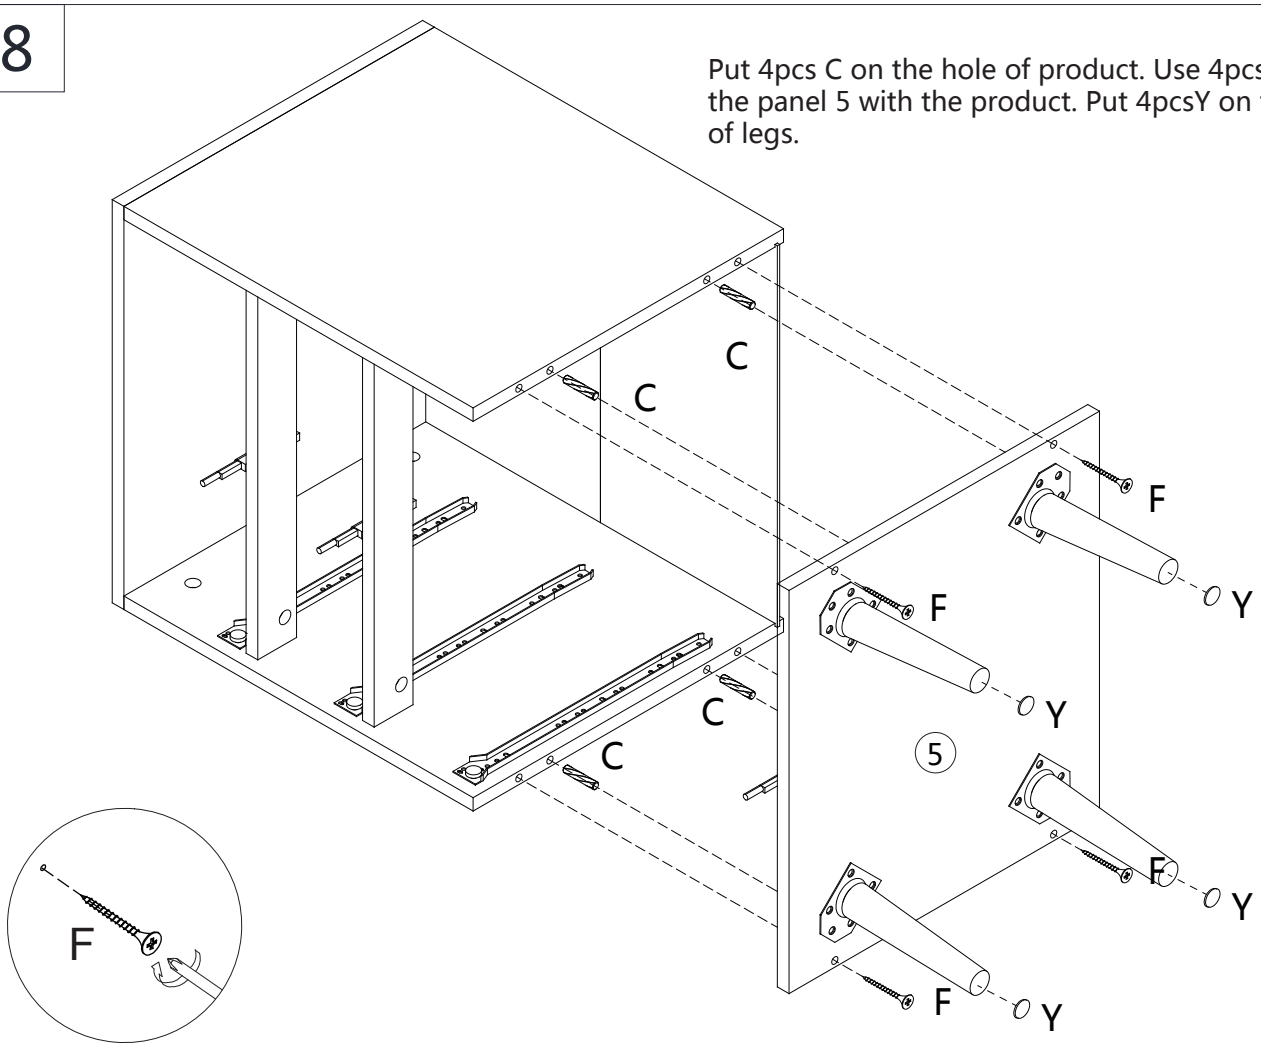

9


x3

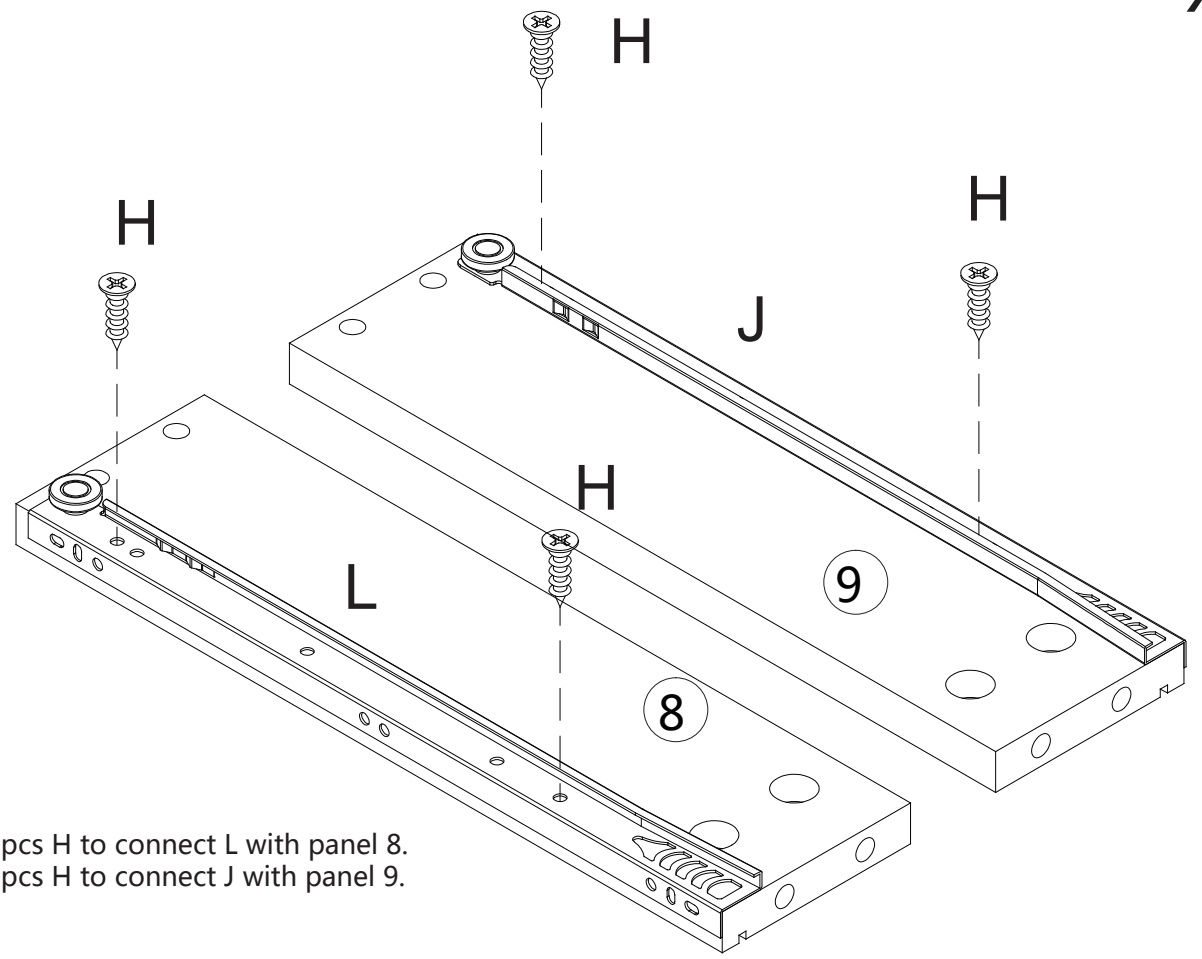

Use 2pcs H to connect L with panel 8.
Use 2pcs H to connect J with panel 9.

10


x3

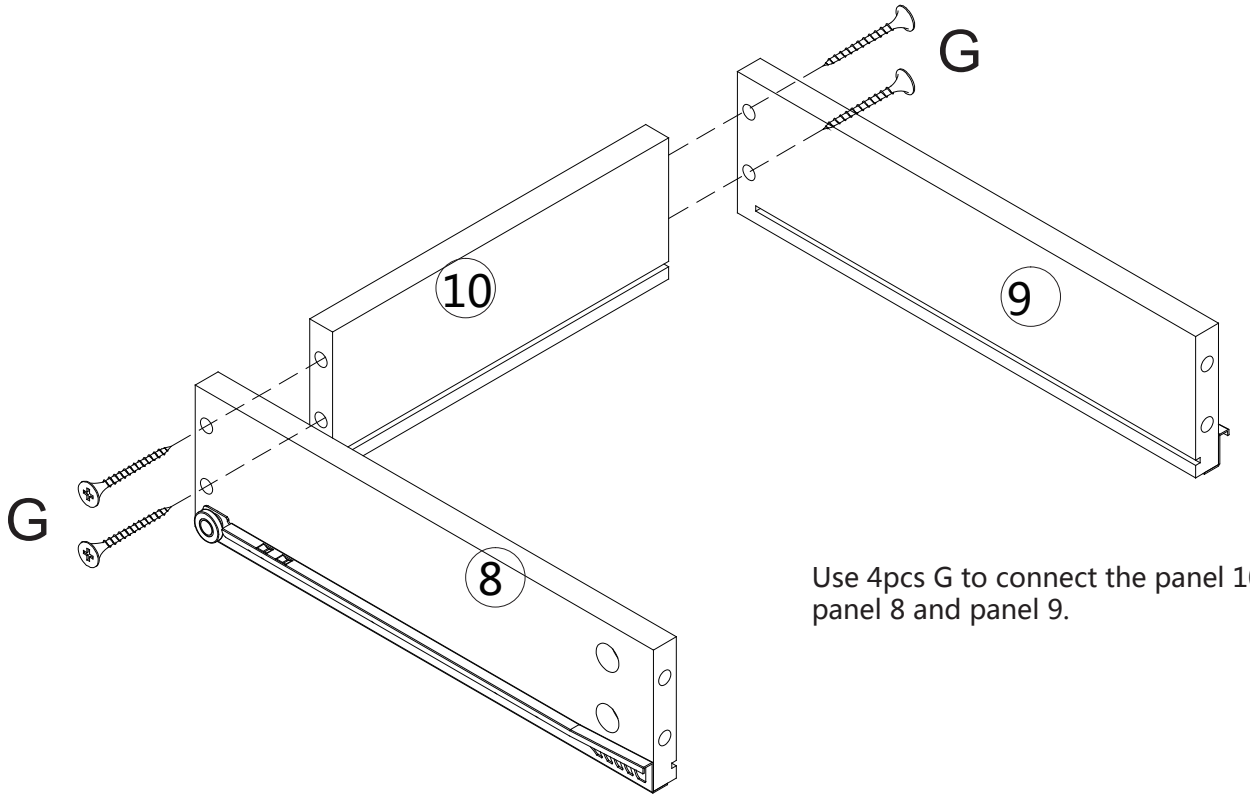


Use 4pcs G to connect the panel 10 with panel 8 and panel 9.

11

x3

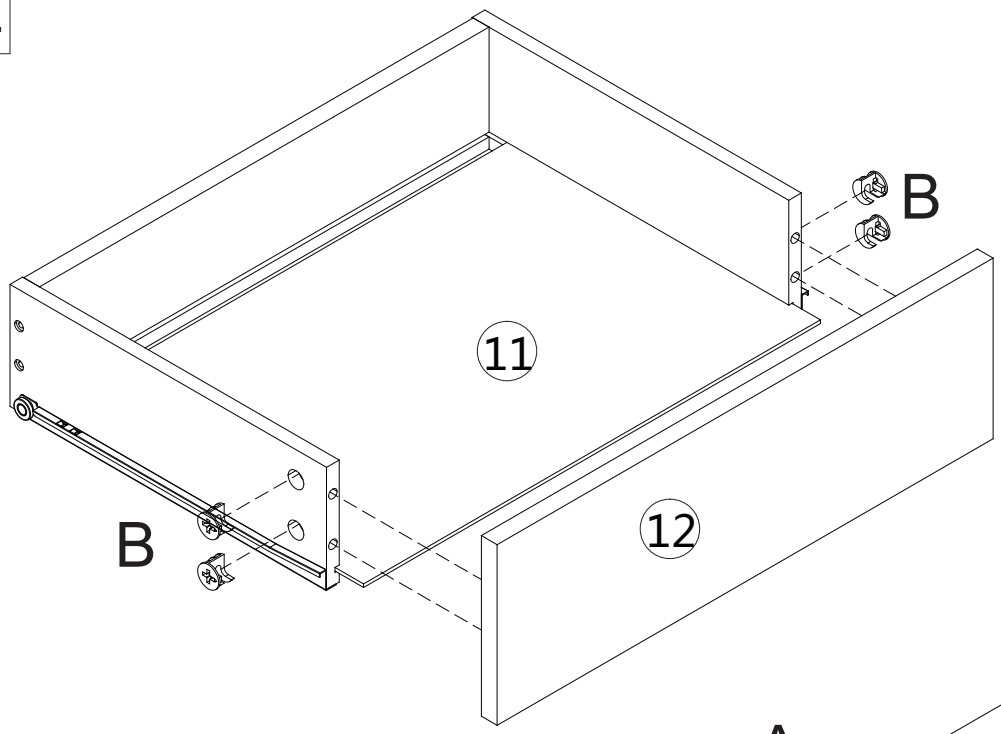


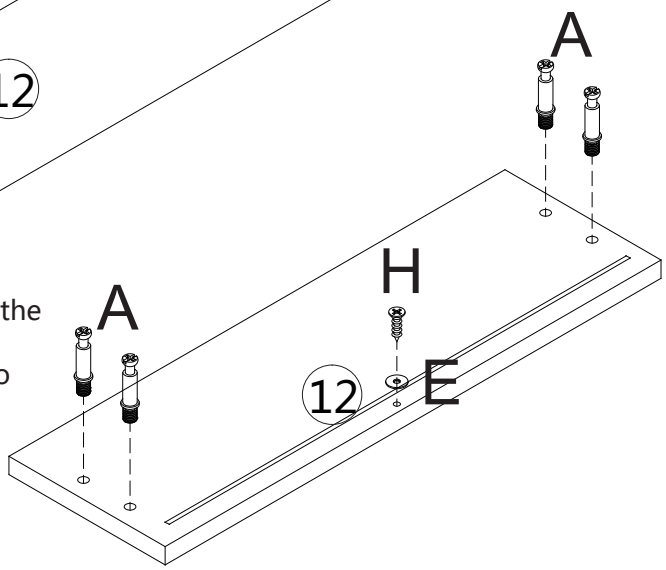


Use H to connect E with panel 12. Screwed 4pcs A in the hole of panel 12. Push the bottom board 12 in the drawer. Put 4pcs B on the hole of drawer. Tighten B to connect panel 12 with the drawer.


12


Push the drawers in the product.

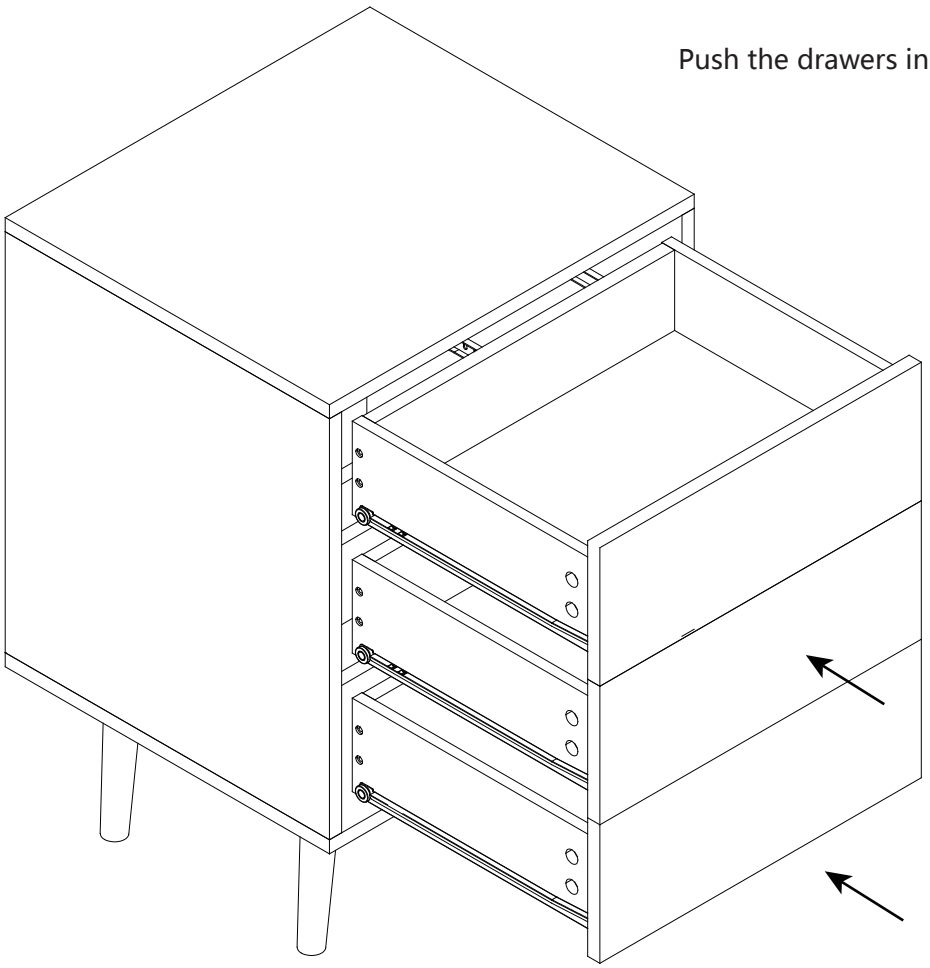

13

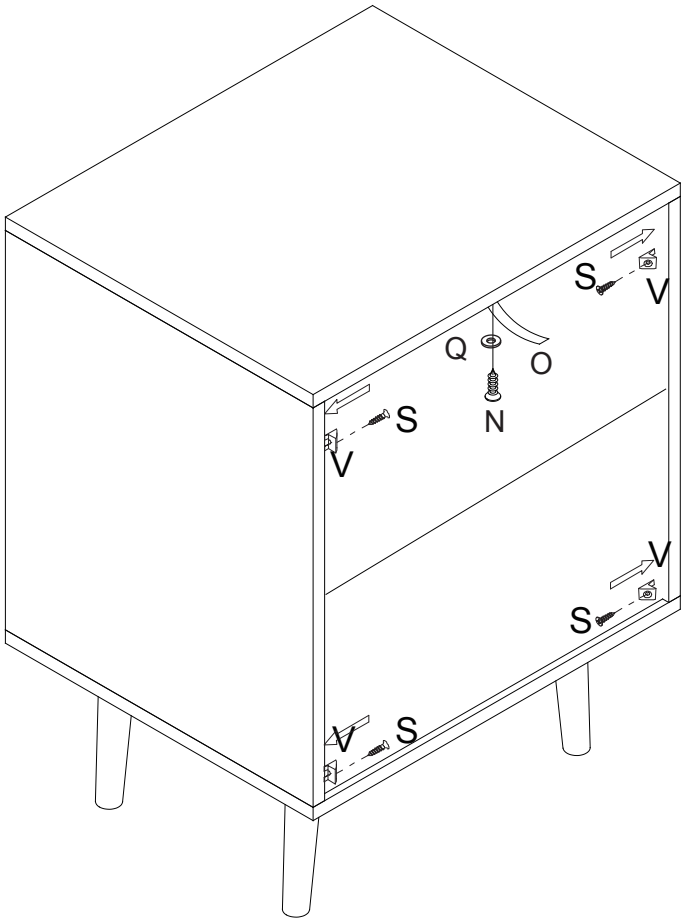


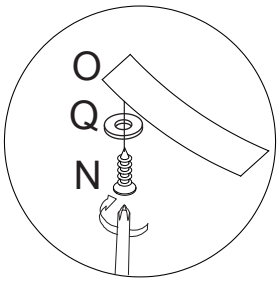

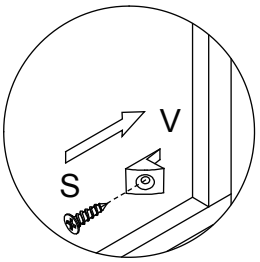

Use N to connect Q,O with product. Use 4pcs screw S to connect V with the product.

14

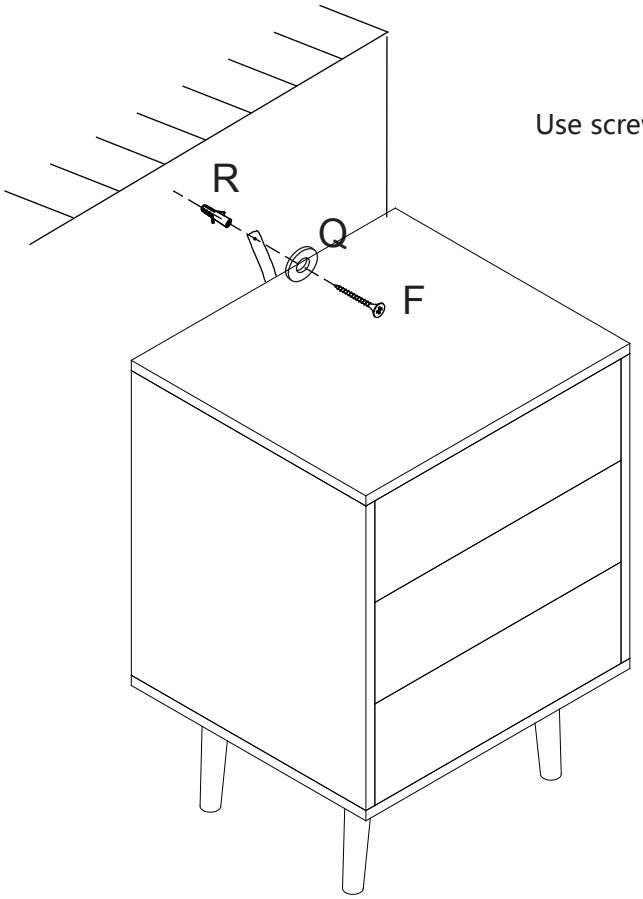

Use screw F to connect Q ,O ,R with the wall.