







Instrucciones de armado

Modelo: COMODA 6CJS FLOR


SKU: 137214999



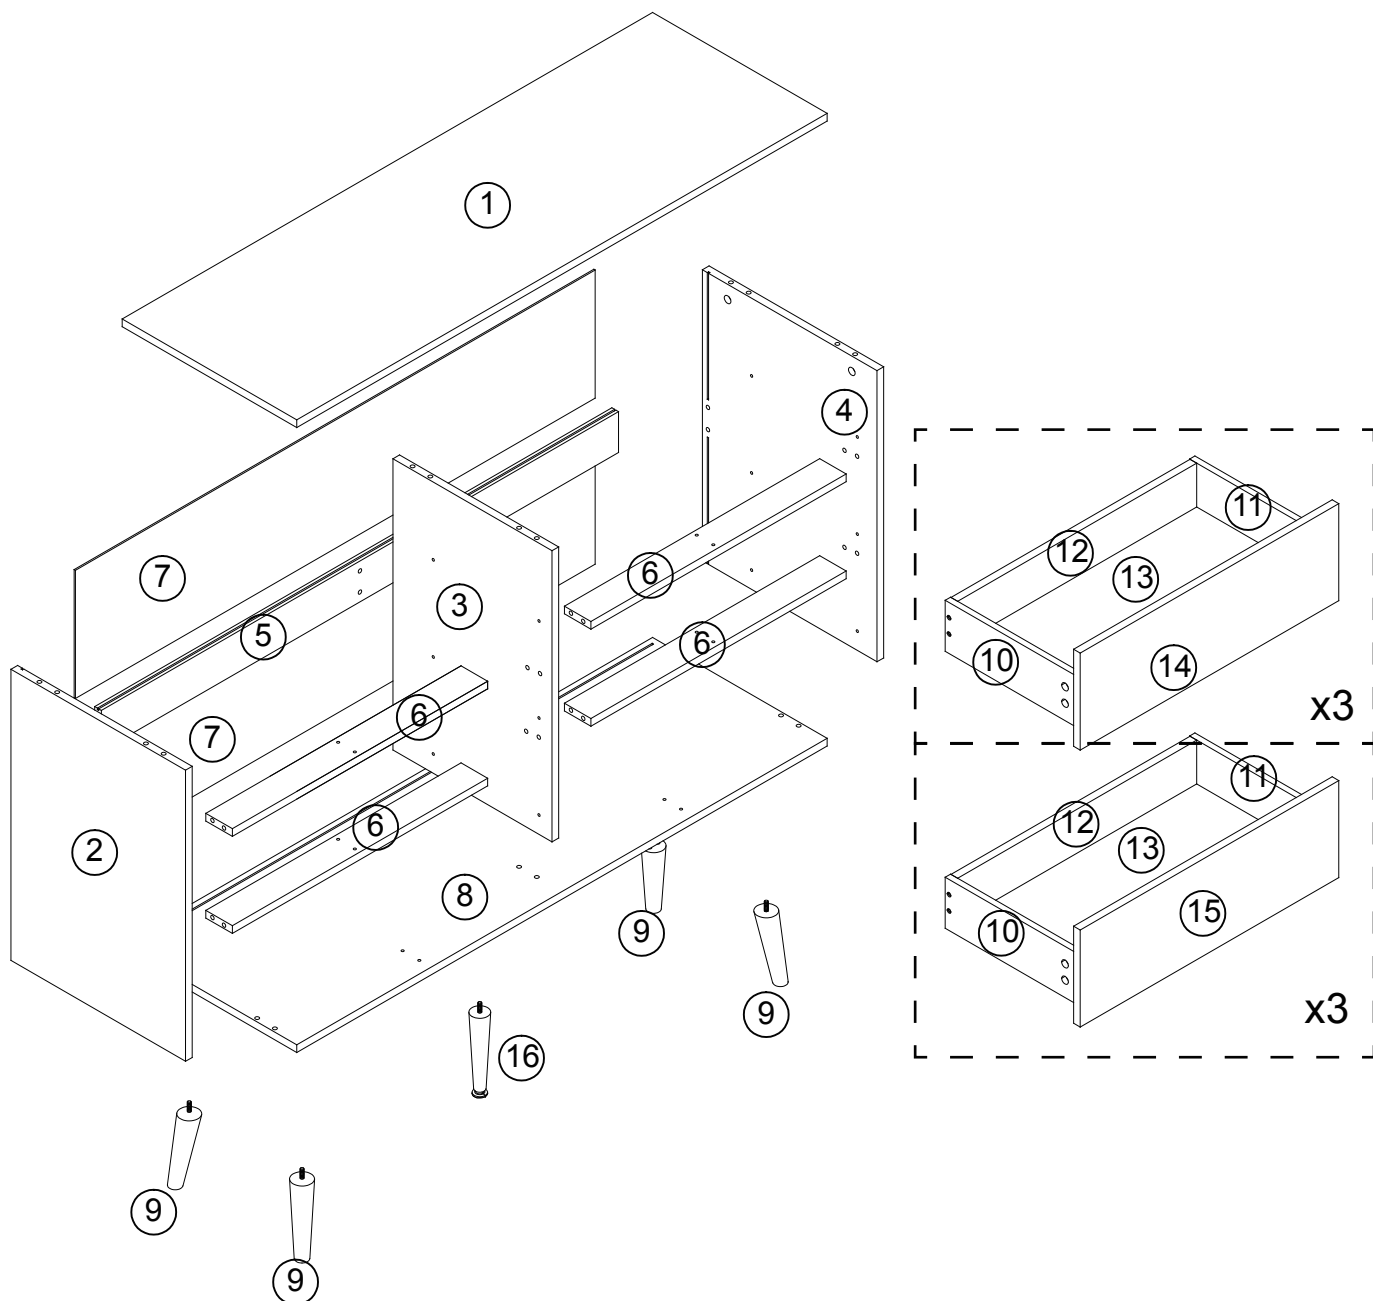

A x42  Cam Bolts	B x42  Hidden cams	C x16  wood dowels	D x6  push bottom	E x6  washers	F x2  wood dowels 8x50mm	G x34  screw 4x35mm
H x66  screw 3x12mm	I x6  slider runner	J x6  slider runner	K x6  slider runner	L x6  slider runner	M x4  metal scraps	N x22  screw
O x2  Expansion screw	P x8  Backboard locker	Q x8  screw 3x14mm	R x2  Anti-tip Restraints	S x1  adjustable pin	Y x4  EVA Pads	


1

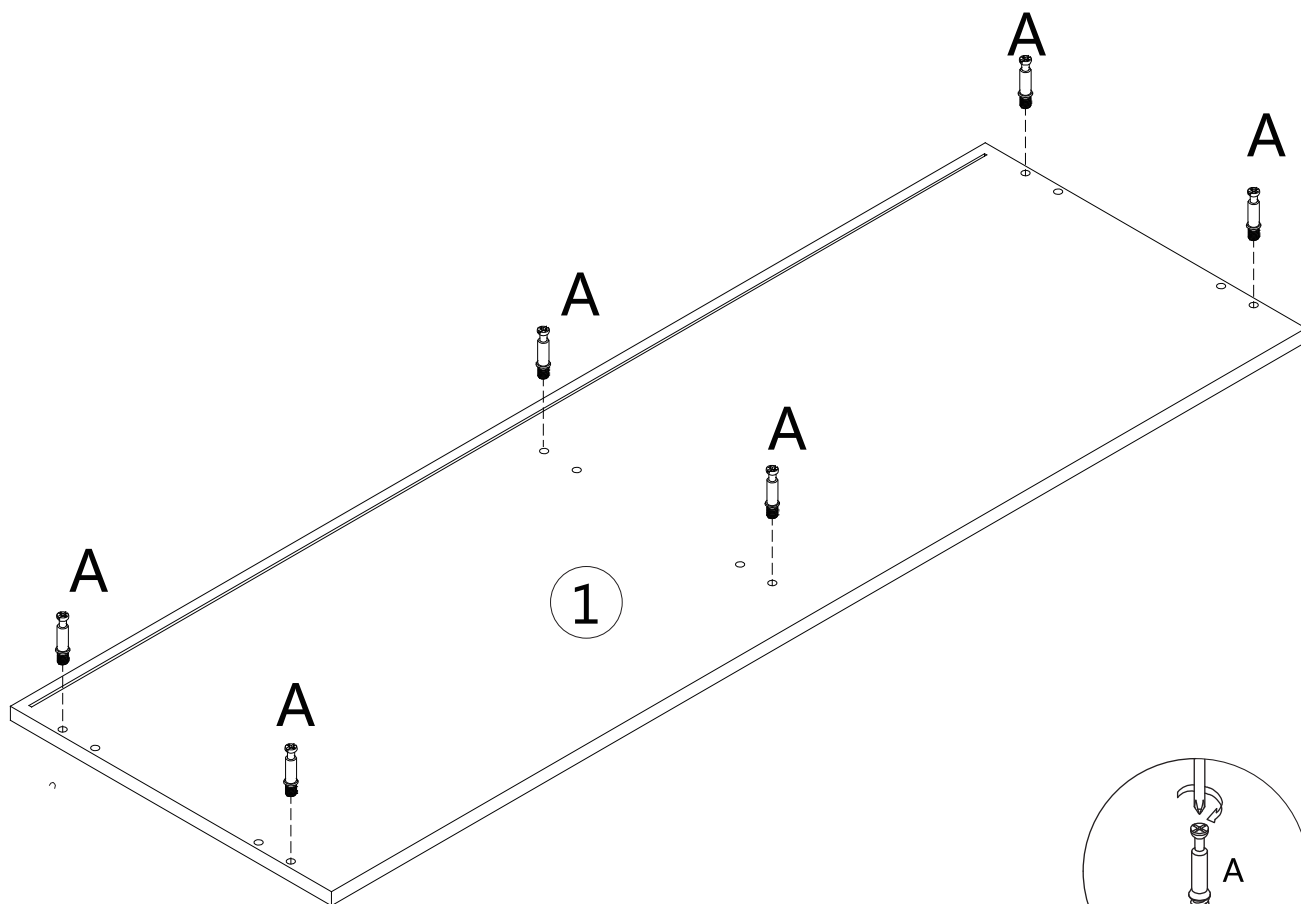


Screwed 6pcs A in the hole of panel 1.

2

Screwed 4pcs A in the hole of panel 2. Use 6pcs H to connect 3pcs I with panel 2.
Screwed 4pcs A in the hole of panel 4. Use 6pcs H to connect 3pcs K with panel 4.

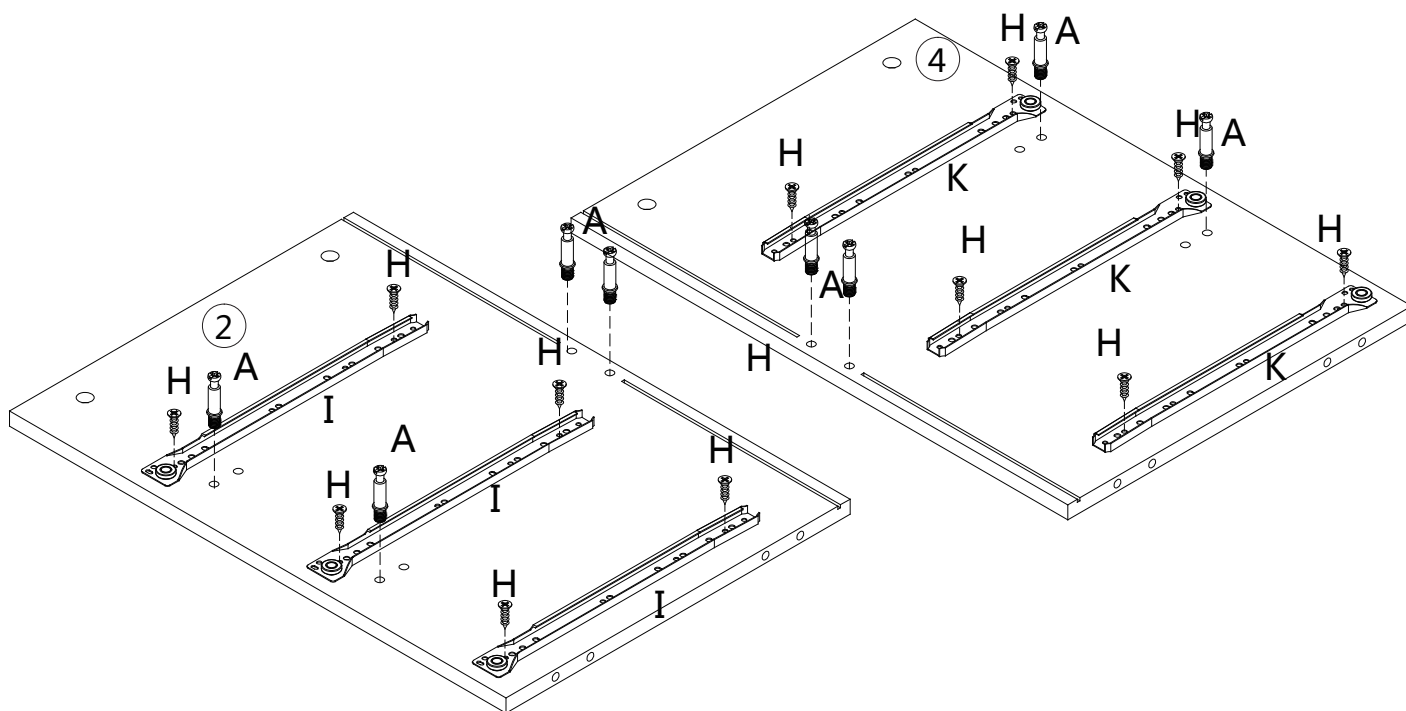


3

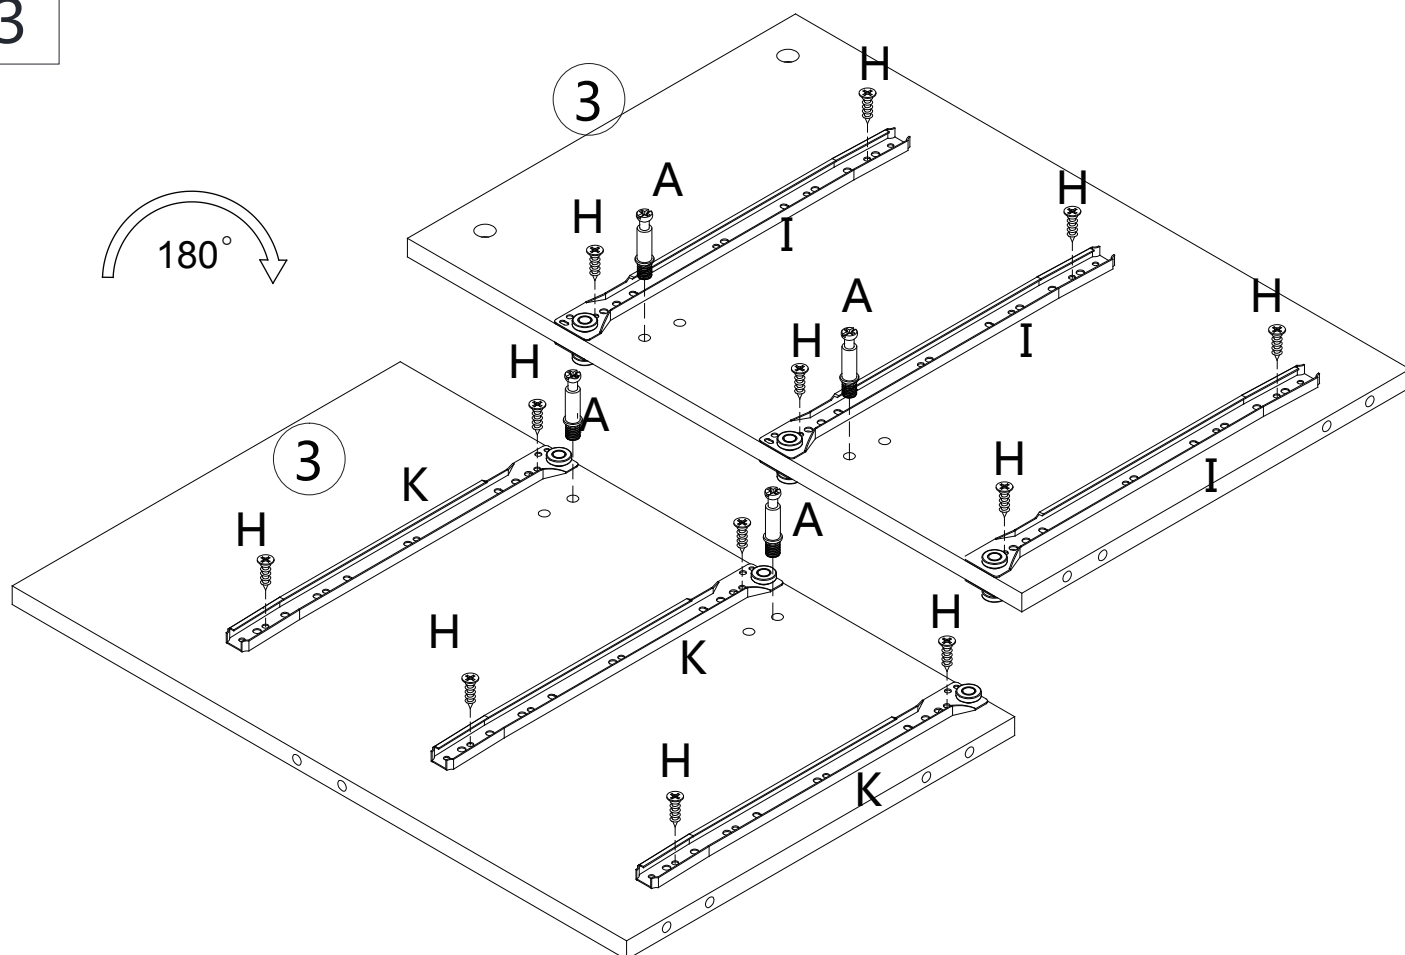


Screwed 2pcs A in the hole of panel 3. Use 6pcs H to connect 3pcs K with panel 3. Turn the panel 180°. On the other side, screwed 2pcs A in the hole, use 6pcs H to connect 3pcs I with the panel 3.

4

Put 2pcs F on the hole of panel 3. Put 2pcs B on the hole of panel 6. Tighten B to connect 2pcs panel 6 with panel 3. Use 2pcs G to connect the panel 5 with panel 3.

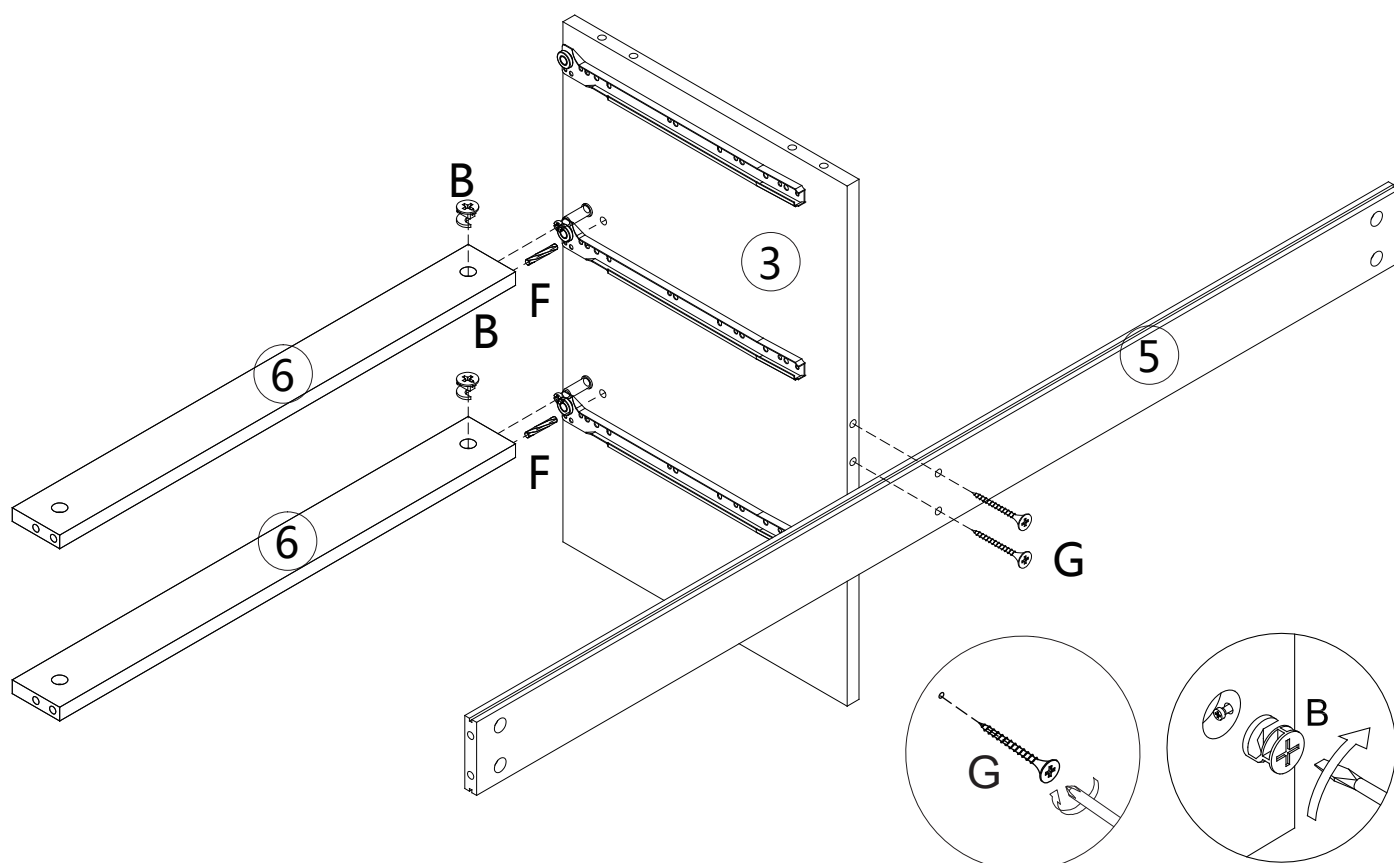


5

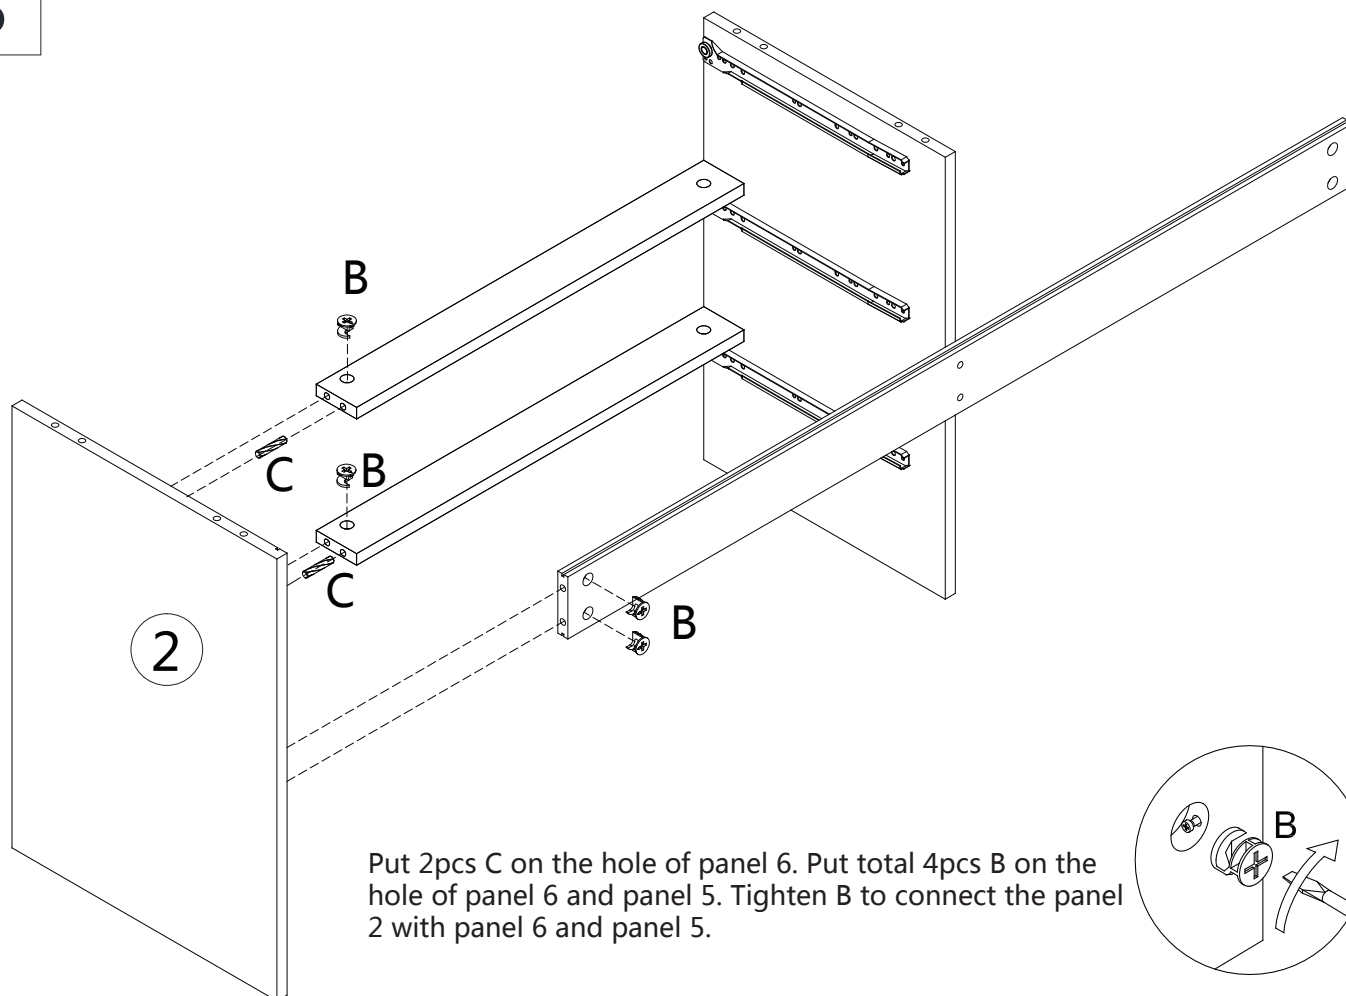

Put 2pcs C on the hole of panel 6. Put total 4pcs B on the hole of panel 6 and panel 5. Tighten B to connect the panel 2 with panel 6 and panel 5.


6

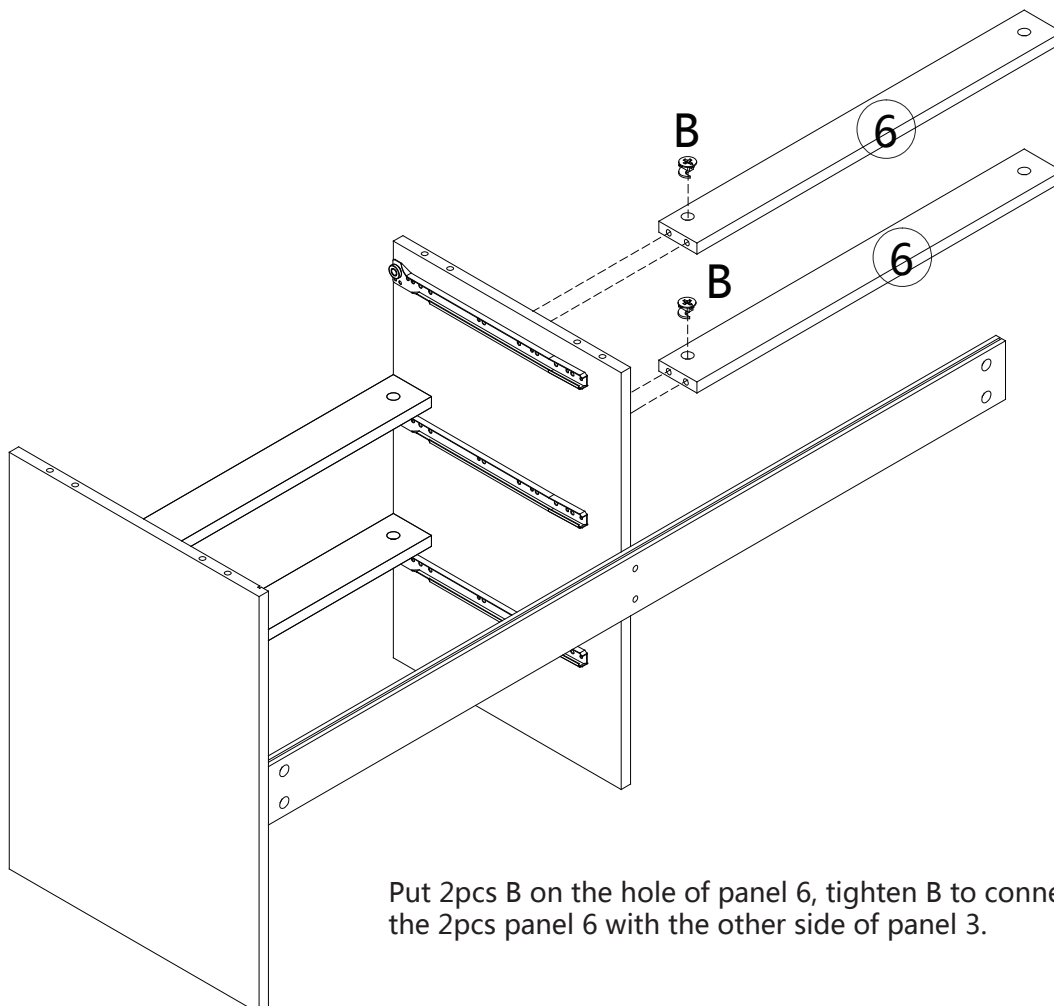


Put 2pcs B on the hole of panel 6, tighten B to connect the 2pcs panel 6 with the other side of panel 3.

7

Put 2pcs C on the hole of panel 4. Put total 4pcs B on the hole of panel 6 and panel 5. Tighten B to connect the panel 4 with product.

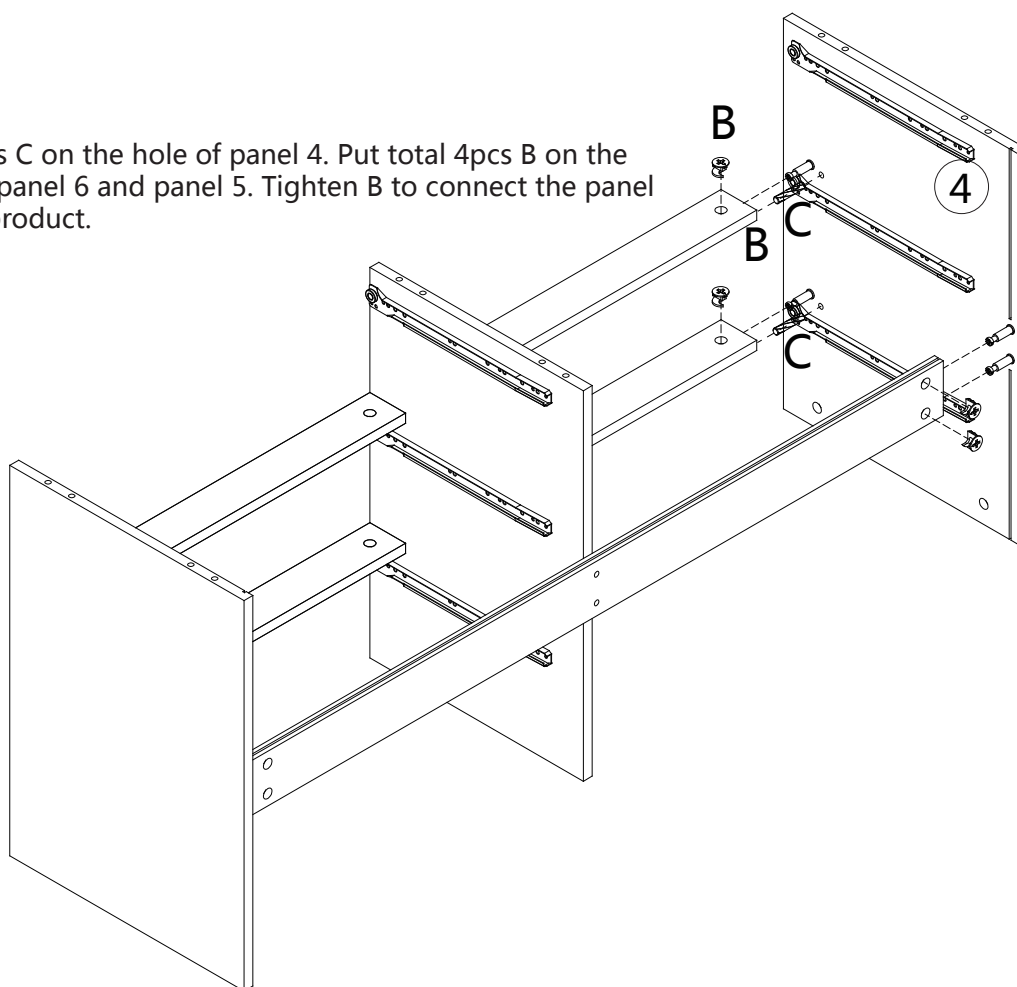


8

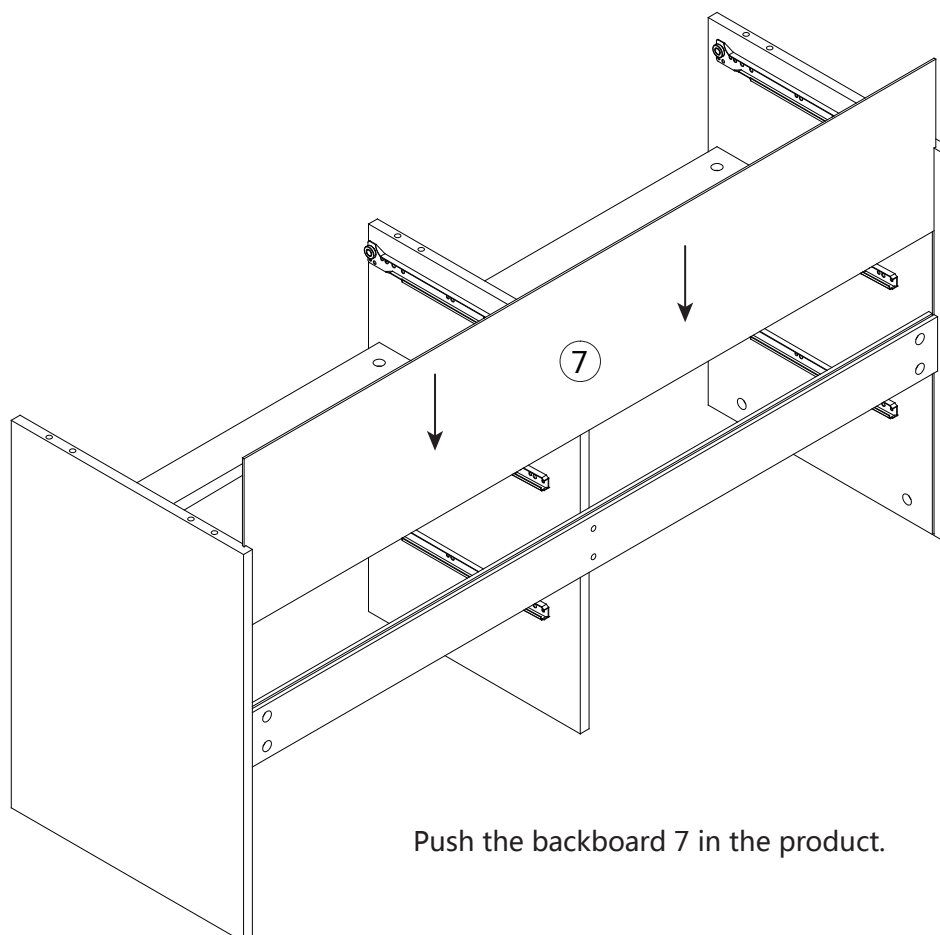


Push the backboard 7 in the product.


9

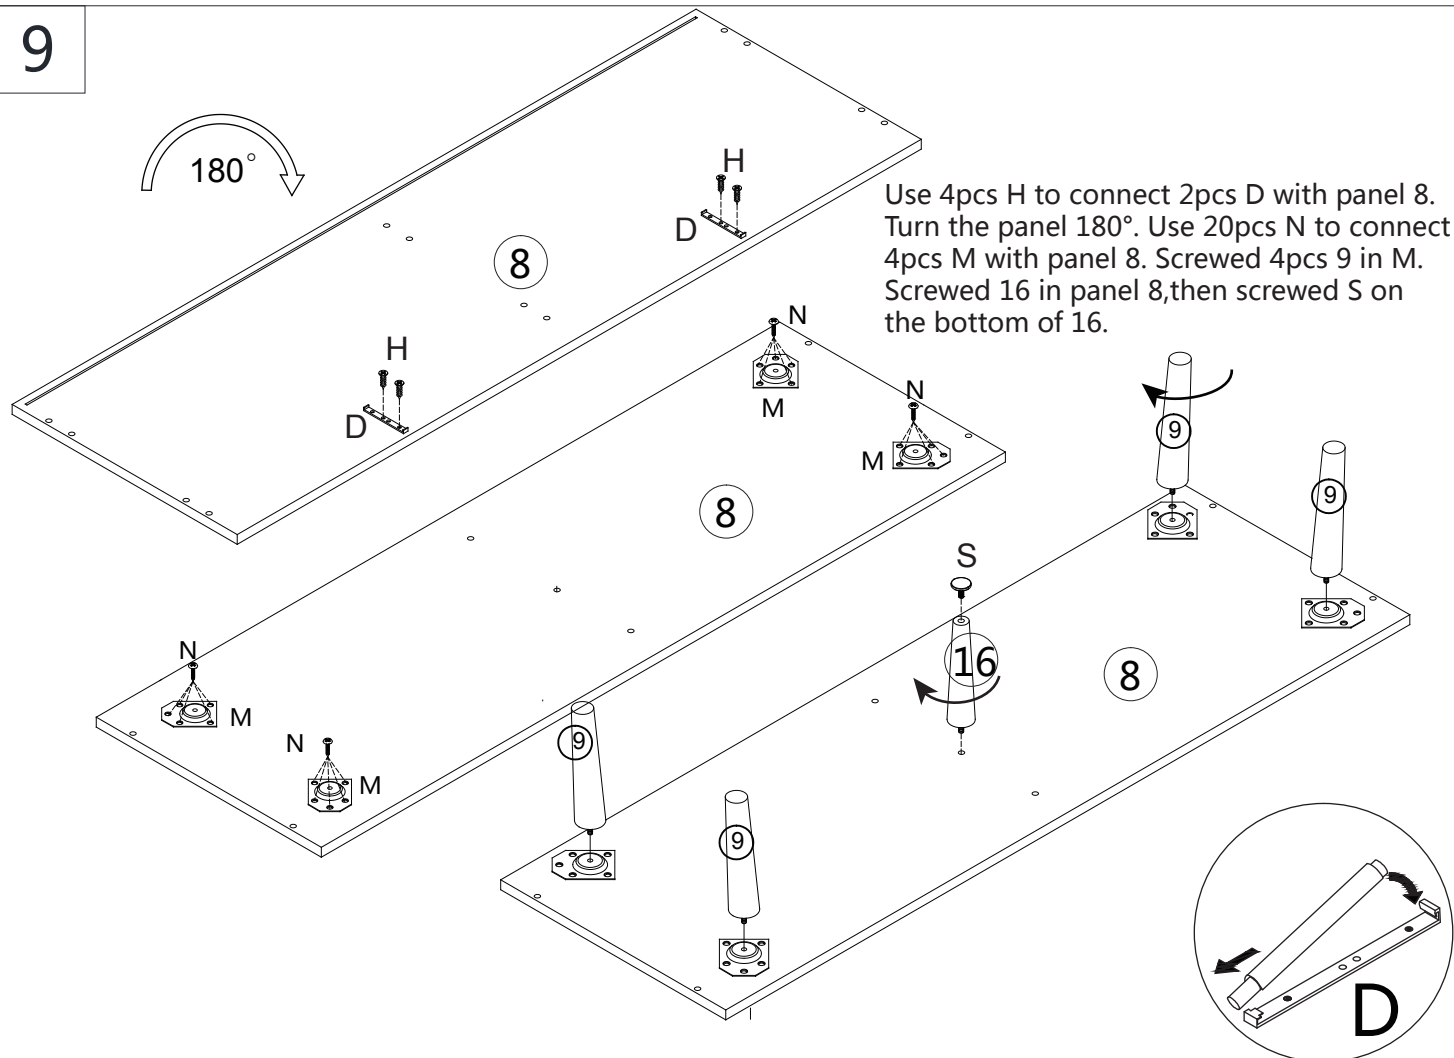


10

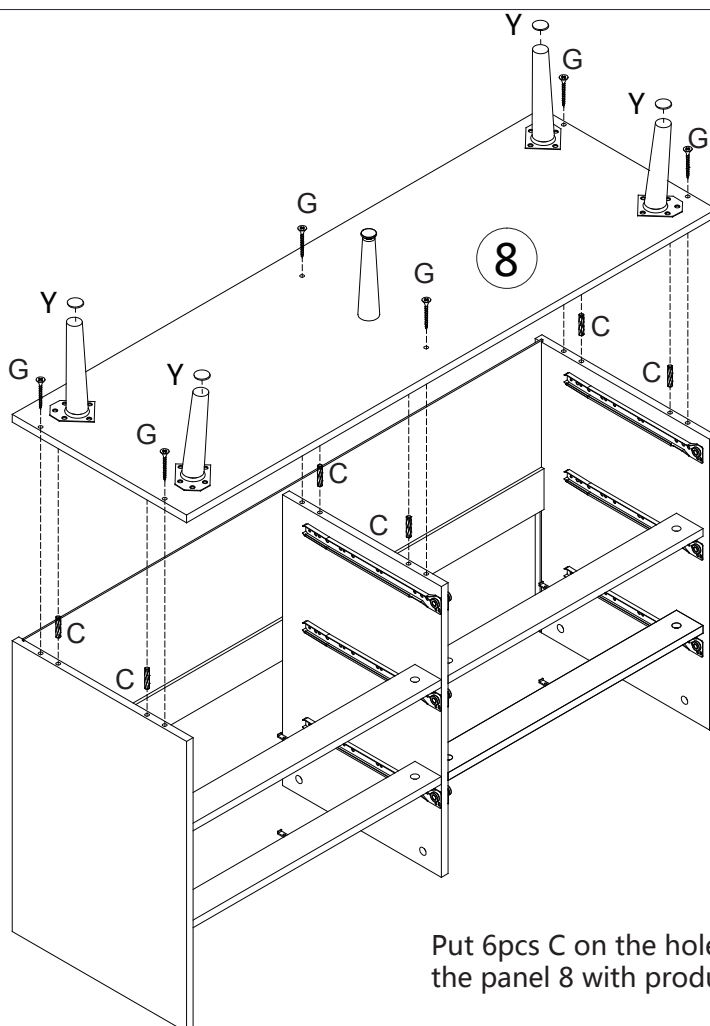


11

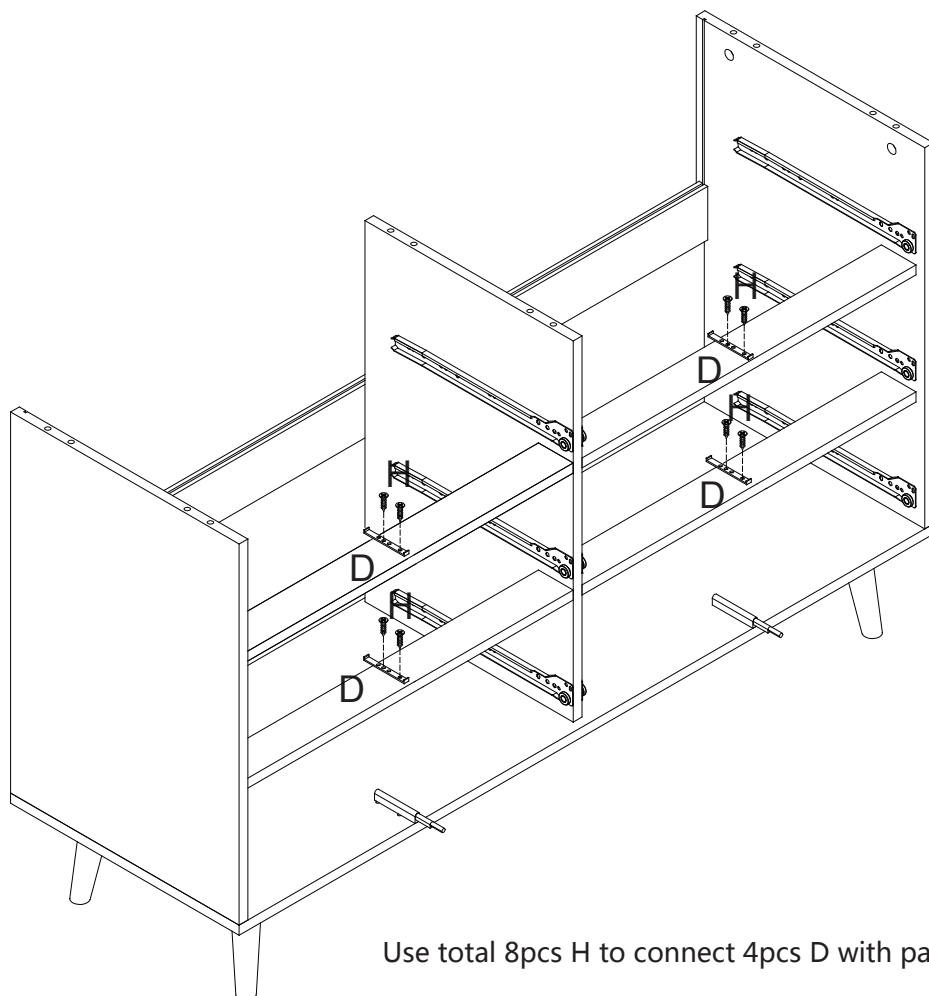


Use total 8pcs H to connect 4pcs D with panel 6.

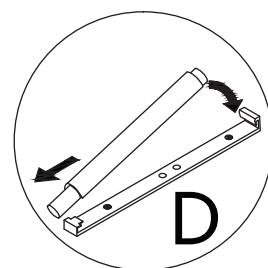

12

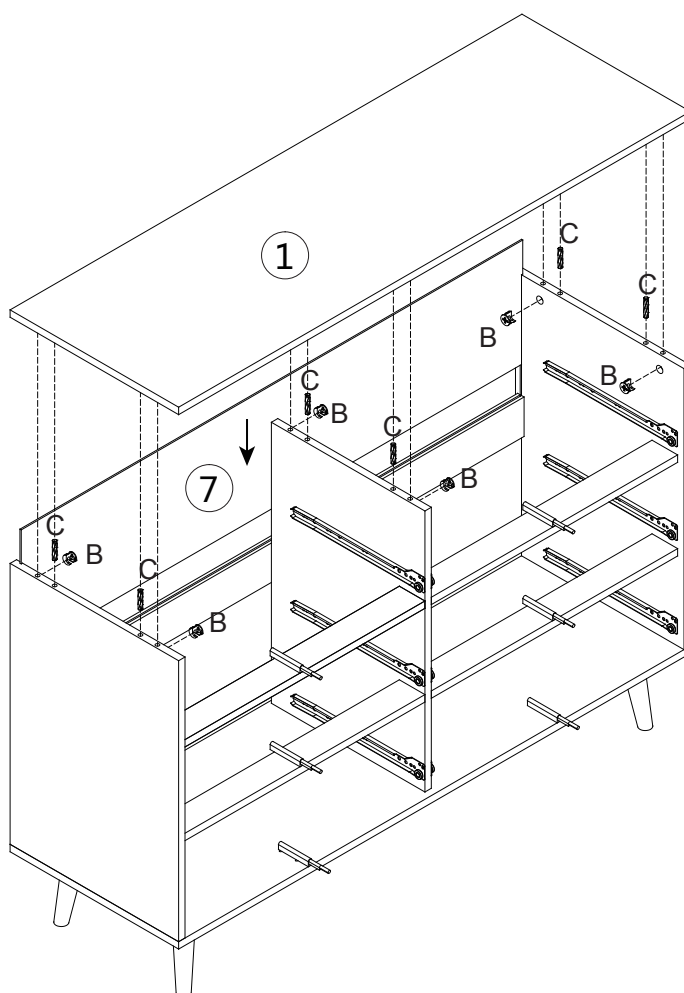


Push the backboard 7 in the product. Put 6pcs C and 6pcs B on the hole of product. Tighten B to connect the panel 1 with the product.

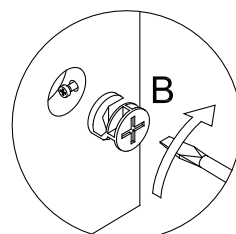

13


x6

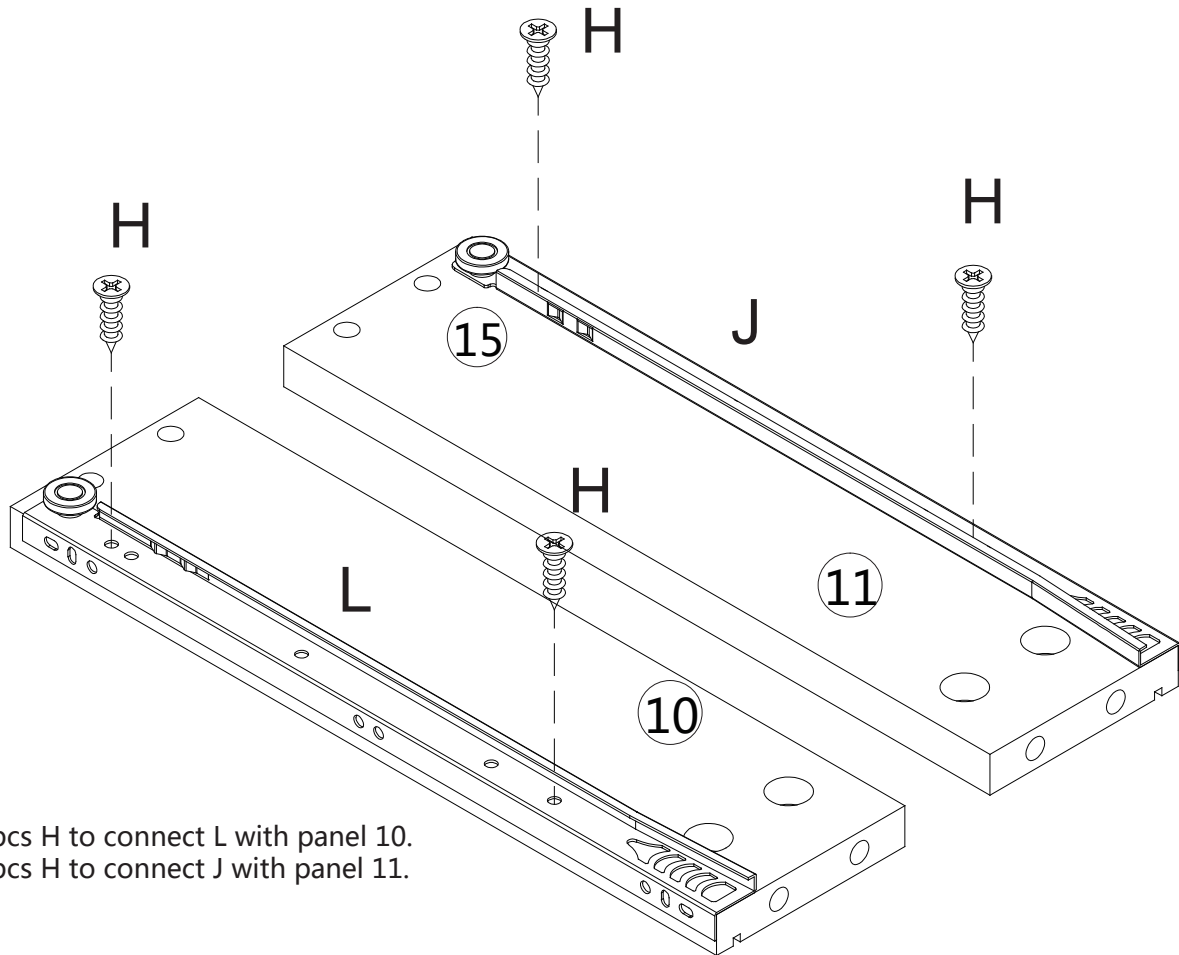

Use 2pcs H to connect L with panel 10.
Use 2pcs H to connect J with panel 11.



14

x6

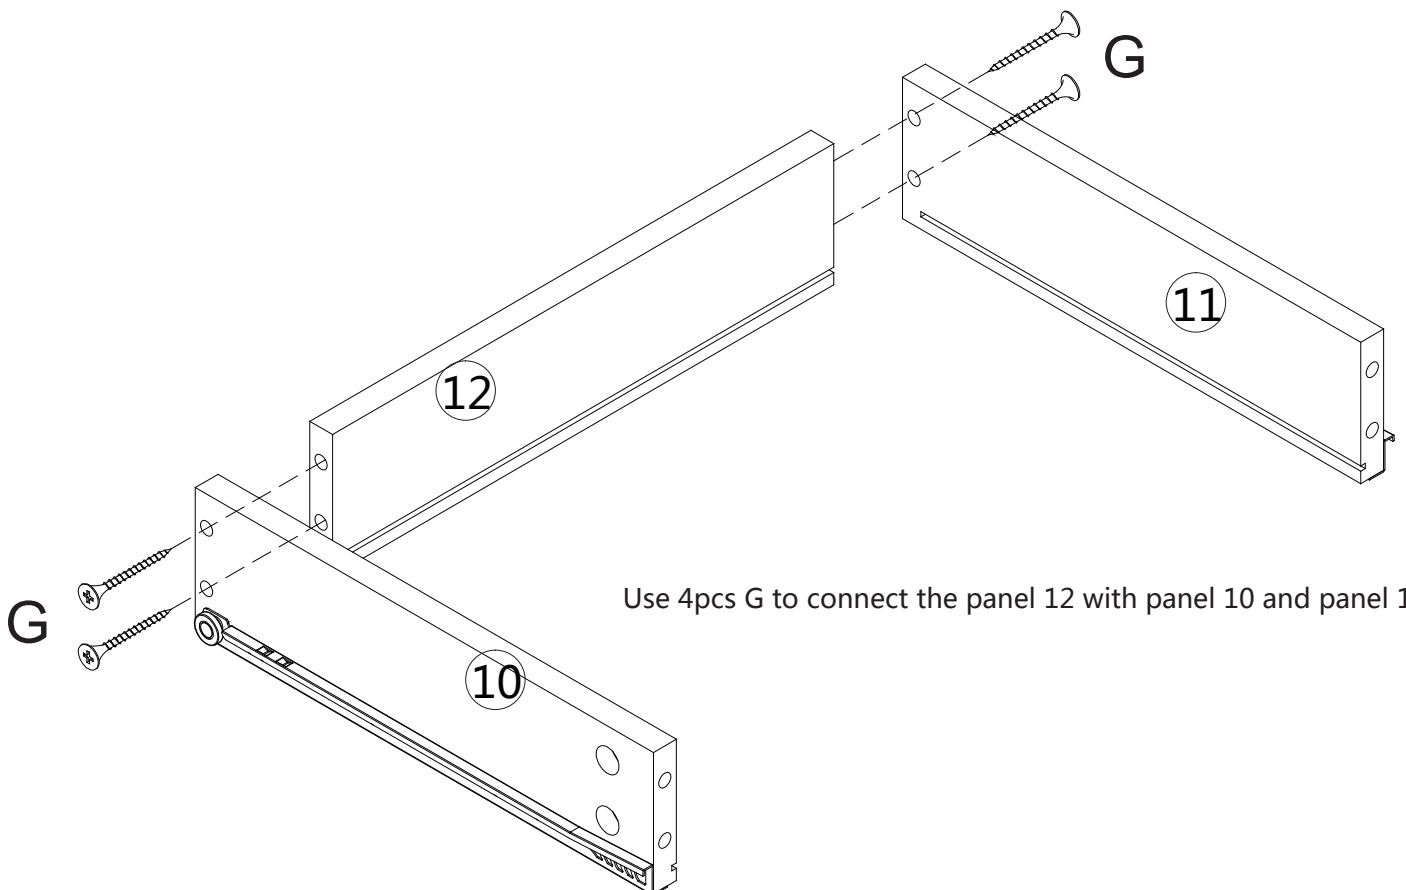


Use 4pcs G to connect the panel 12 with panel 10 and panel 11.

- 15** Push the panel 13 in the drawer. Use H to connect E with panel 14. Screwed 4pcs A in the hole of panel 14. Put 4pcs B on the hole of drawer, then tighten B to connect panel 14 with the drawer. Push the panel 13 in the drawer. Use H to connect E with panel 15. Screwed 4pcs A in the hole of panel 15. Put 4pcs B on the hole of drawer, then tighten B to connect panel 15 with the drawer.

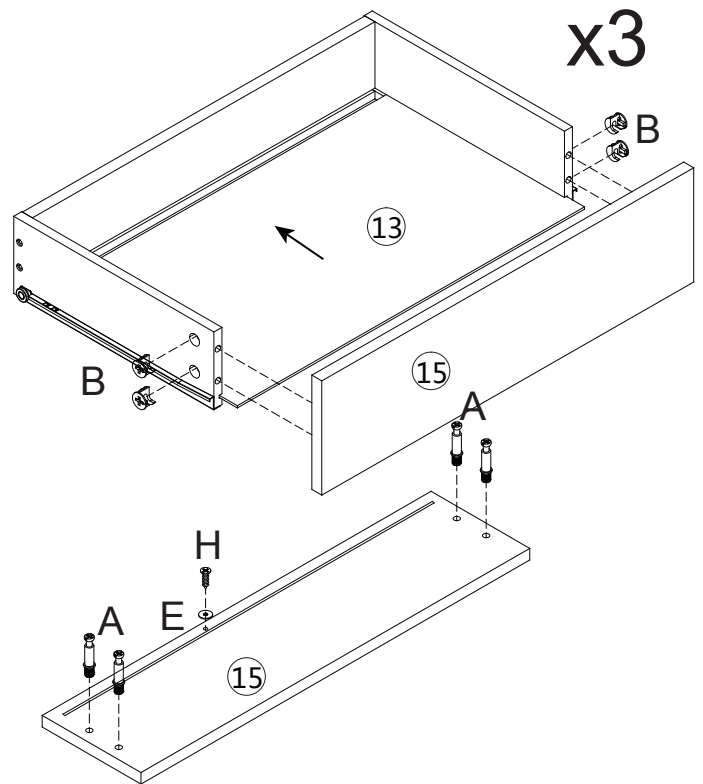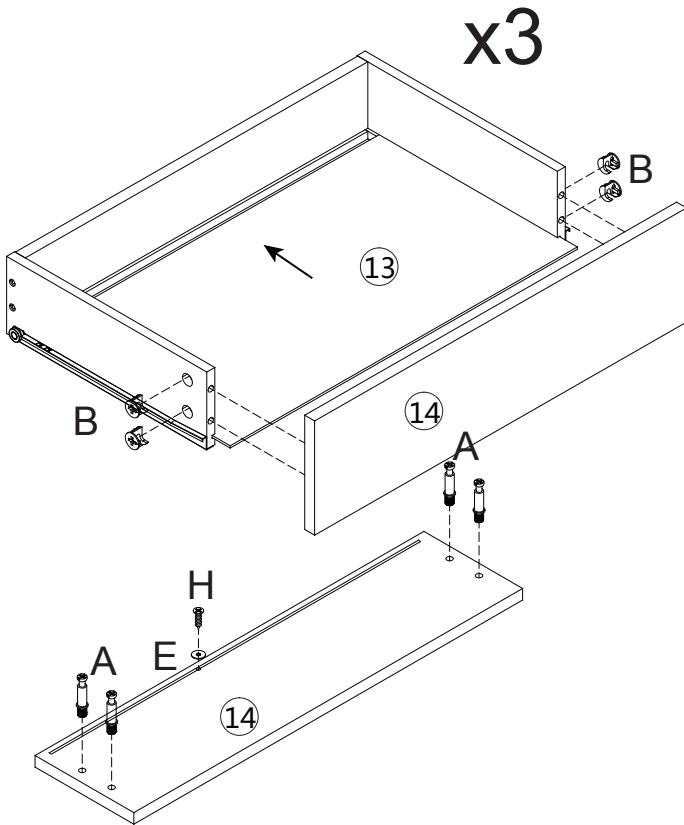


16

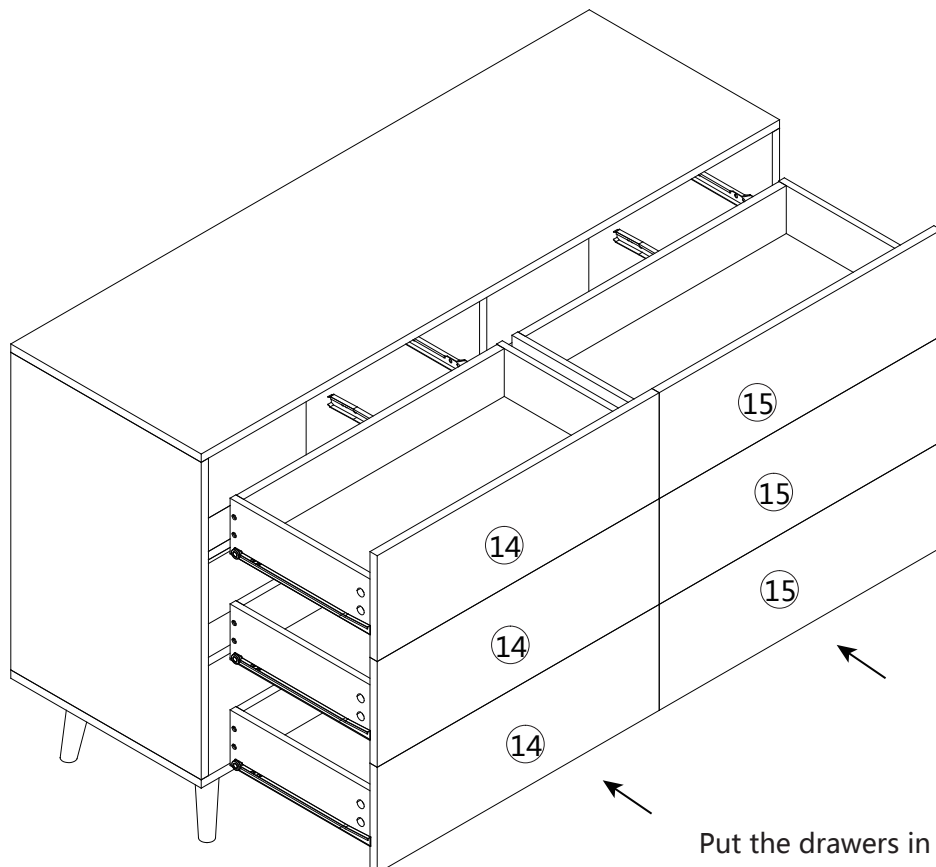


Put the drawers in the product.


17

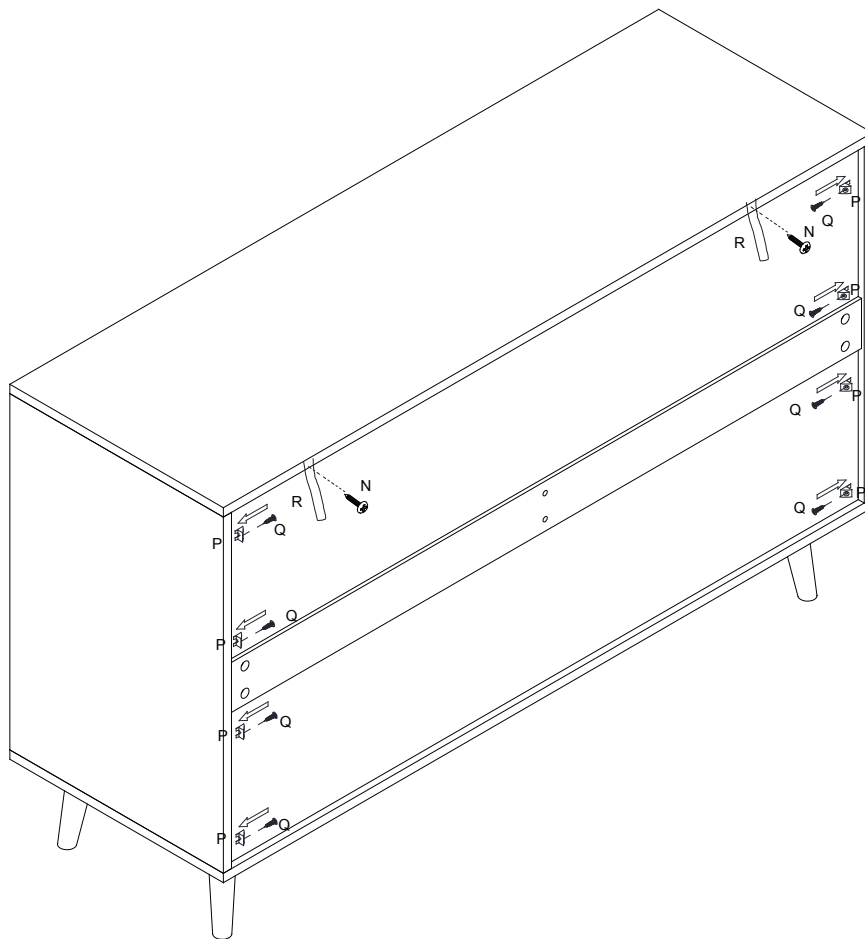

Use 2pcs N to connect 2pcs R with the product.
Use total 8pcs Q to connect 8pcs P with the product.

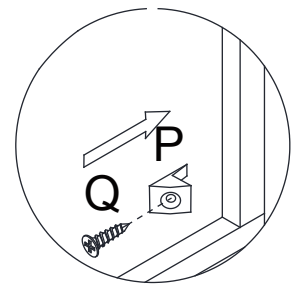

18

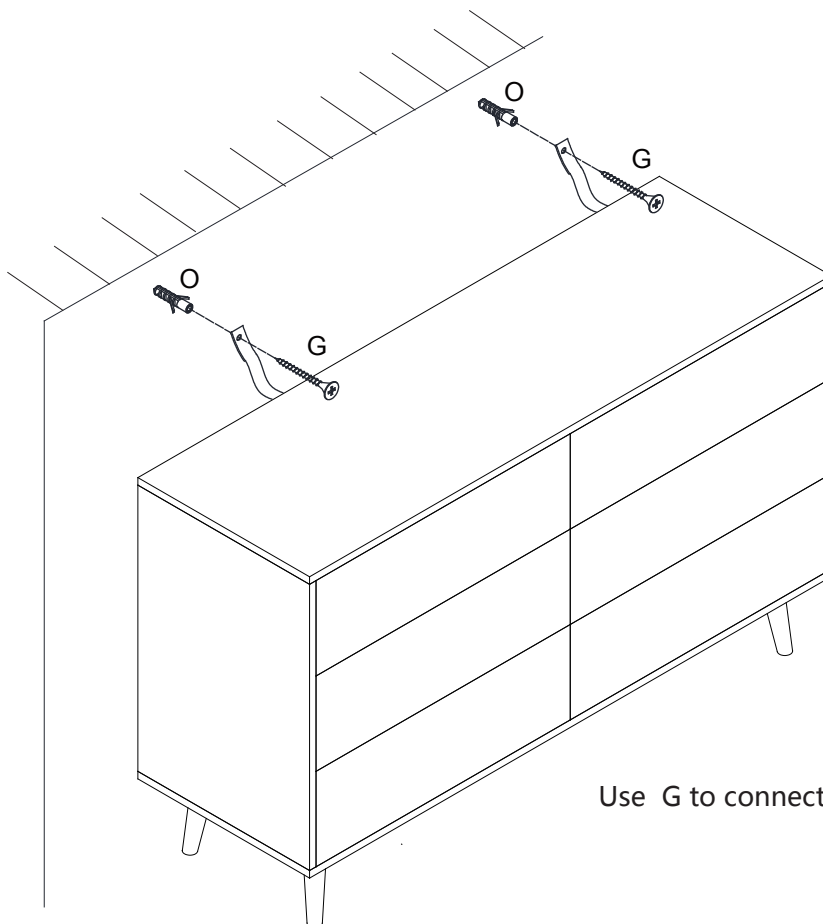

Use G to connect R and O with the wall.