

MANUAL DE MONTAJE - COMODA 5 CAJONES Ref.Y215




Nº	CÓD.	DESCRIÇÃO	MEDIDA	Nº	QTDE
01	203480	Lateral Izquierda/ Lat. Esquerda	900x385x15	1/1	01
02	203479	Lateral Derecha/ Lat. direita	900x385x15	1/1	01
03	203478	Tablero Superior/ Chapéu	620x385x15	1/1	01
04	203481	Calo Frontal/ Rodape Frontal	588x77x15	1/1	01
05	203482	Calo Trasero/ Rodape Traseiro	588x77x15	1/1	01
06	203483	Trasero Muble/ Costa	880x305x2,8	1/1	02
07	203485	Trasero Cajón/ Traseiro Gaveta	532x90x15	1/1	05
08	203487	Lateral Cajón/ Lateral Gaveta	350x125x15	1/1	10
09	203484	Frente Cajón/ Frente Gaveta	600x162x15	1/1	05
10	203486	Fondo Cajón/ Fundo Gaveta	542x356x2,8	1/1	05



EN CASO DE ASISTENCIA IDENTIFICAR CÓD. Y DESCRIPCIÓN DE LA PIEZA

Letra	Nome / Quant	Ferragem	Cód.	Letra	Nome / Quant	Ferragem	Cód.
A	Cavilha 6x30 mm (4x)		46	G	Parafuso minifix (4x)		1416
B	Corrediça Metal 350mm (5x)		1015	H	Prego 11x11 (50x)		310
C	Parafuso cab. chata 3,5x14 mm (80x)		132	I	Puxador Archi 128mm (5x)		1401
D	Parafuso cab. chata 4,0x45 mm (8x)		926	J	Sapata 15x27 (6x)		342
E	Perfil I 815mm (1x)		1024	K	Prego 13x15 (20x)		311
F	Parafuso cab. Flang 3,5x25 mm (10x)		137	L	Tambor minifix (4x)		1417
				M	Cantoneira (10x)		652


Dimensiones:
Profundidad: 400
Altura: 915
Ancho: 620

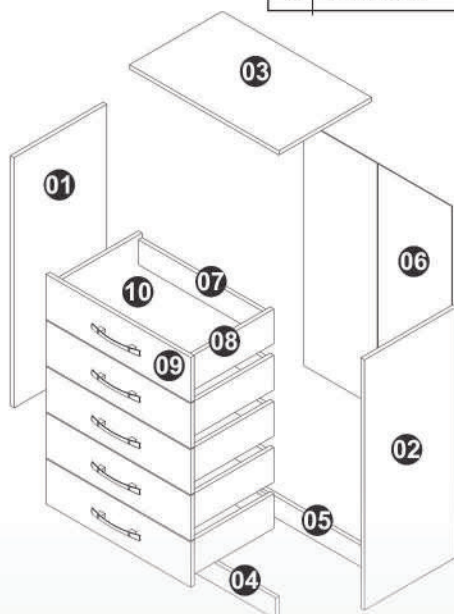


1° Paso/ Paso

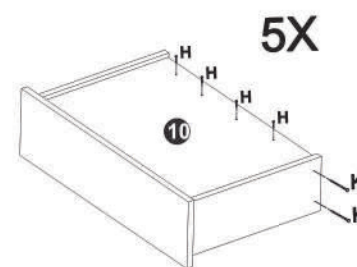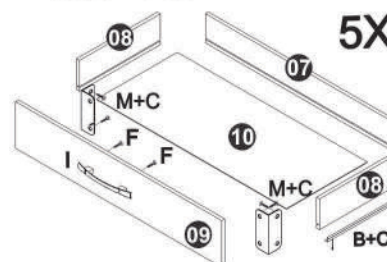

2° Paso/ Paso

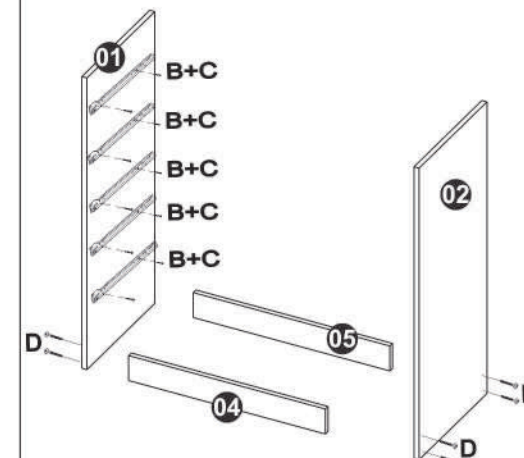

3° Paso/ Paso

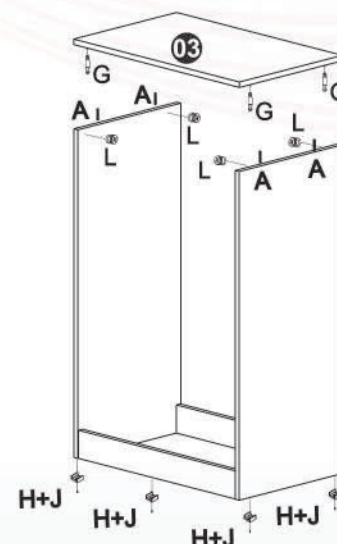

4° Paso/ Paso

